





Accede a apuntes, guías, libros y más de tu carrera


20 Planos de Pérgolas de Madera

pag.

шаблон формы окончаний

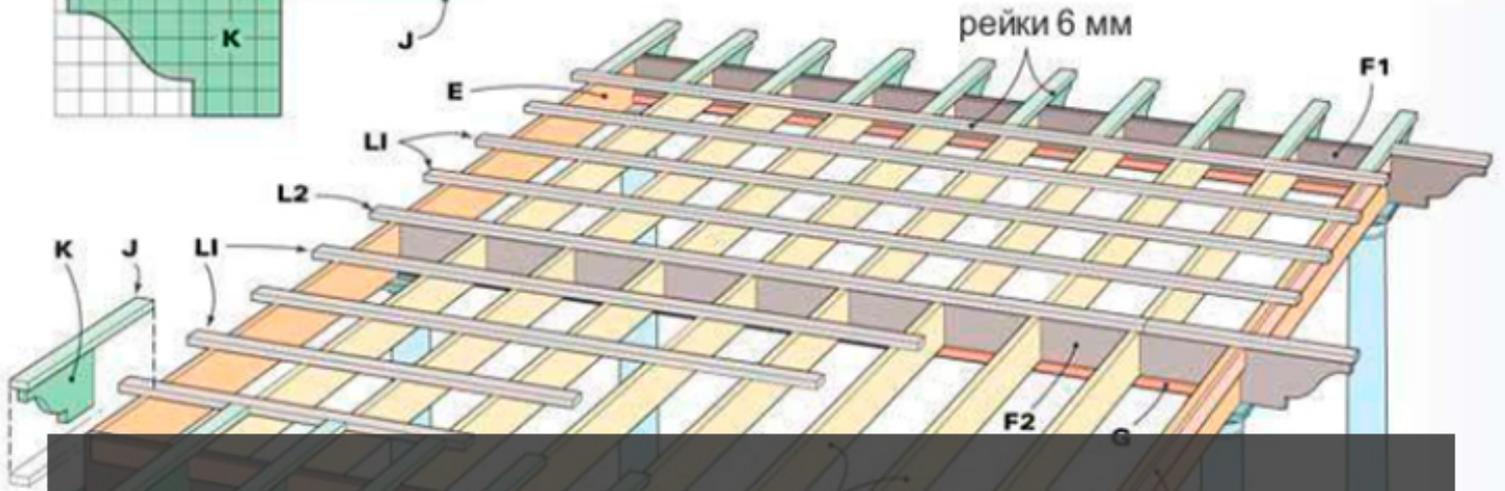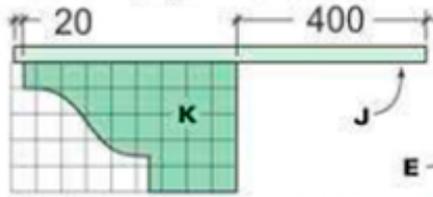


20 PLANOS DE PÉRGOLAS DE MADERA

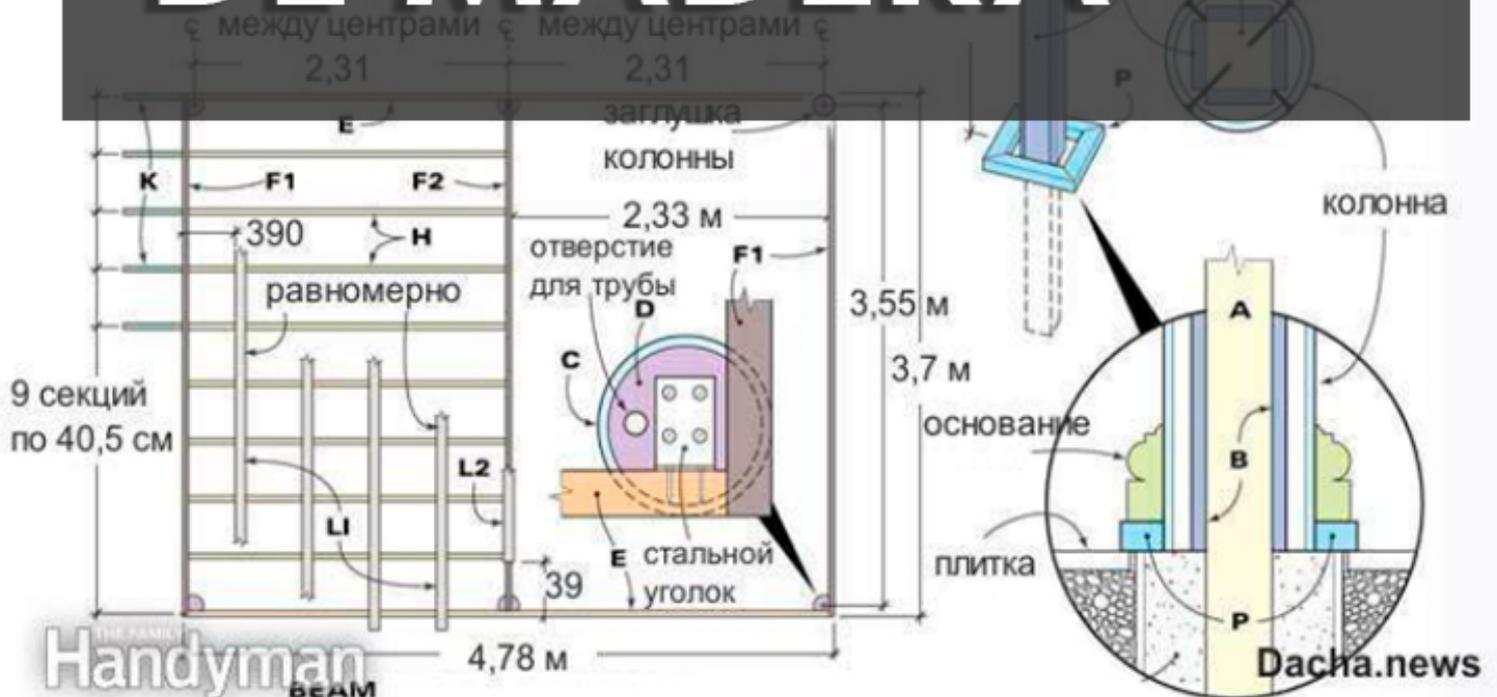



MAS RECURSOS EN:










Material compartido con fines educativos
El libro pertenece a sus respectivos autores.




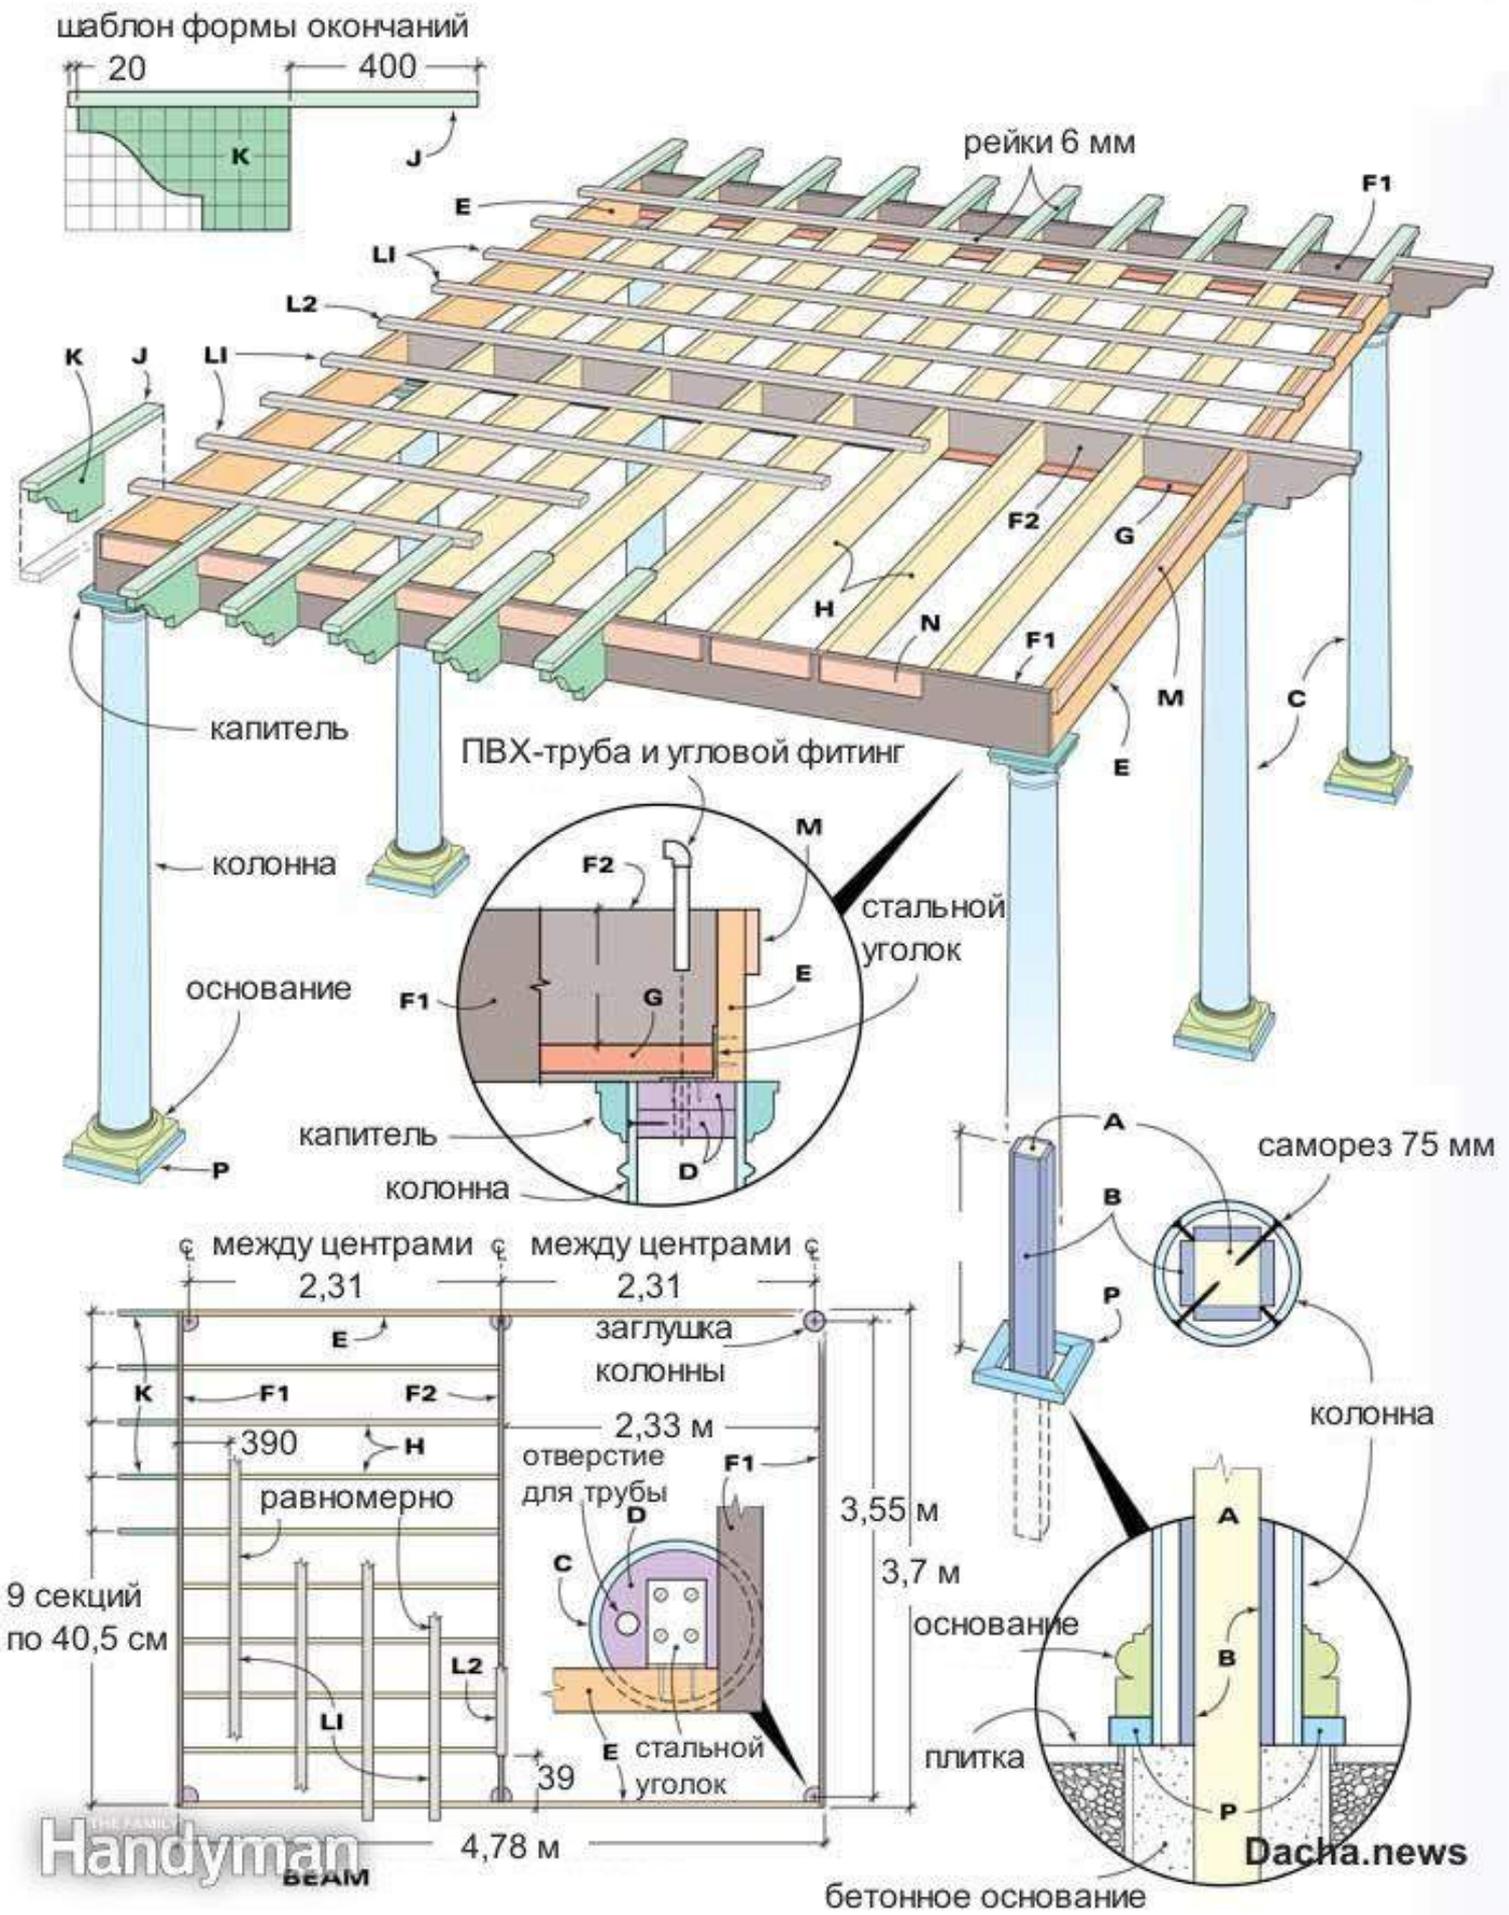





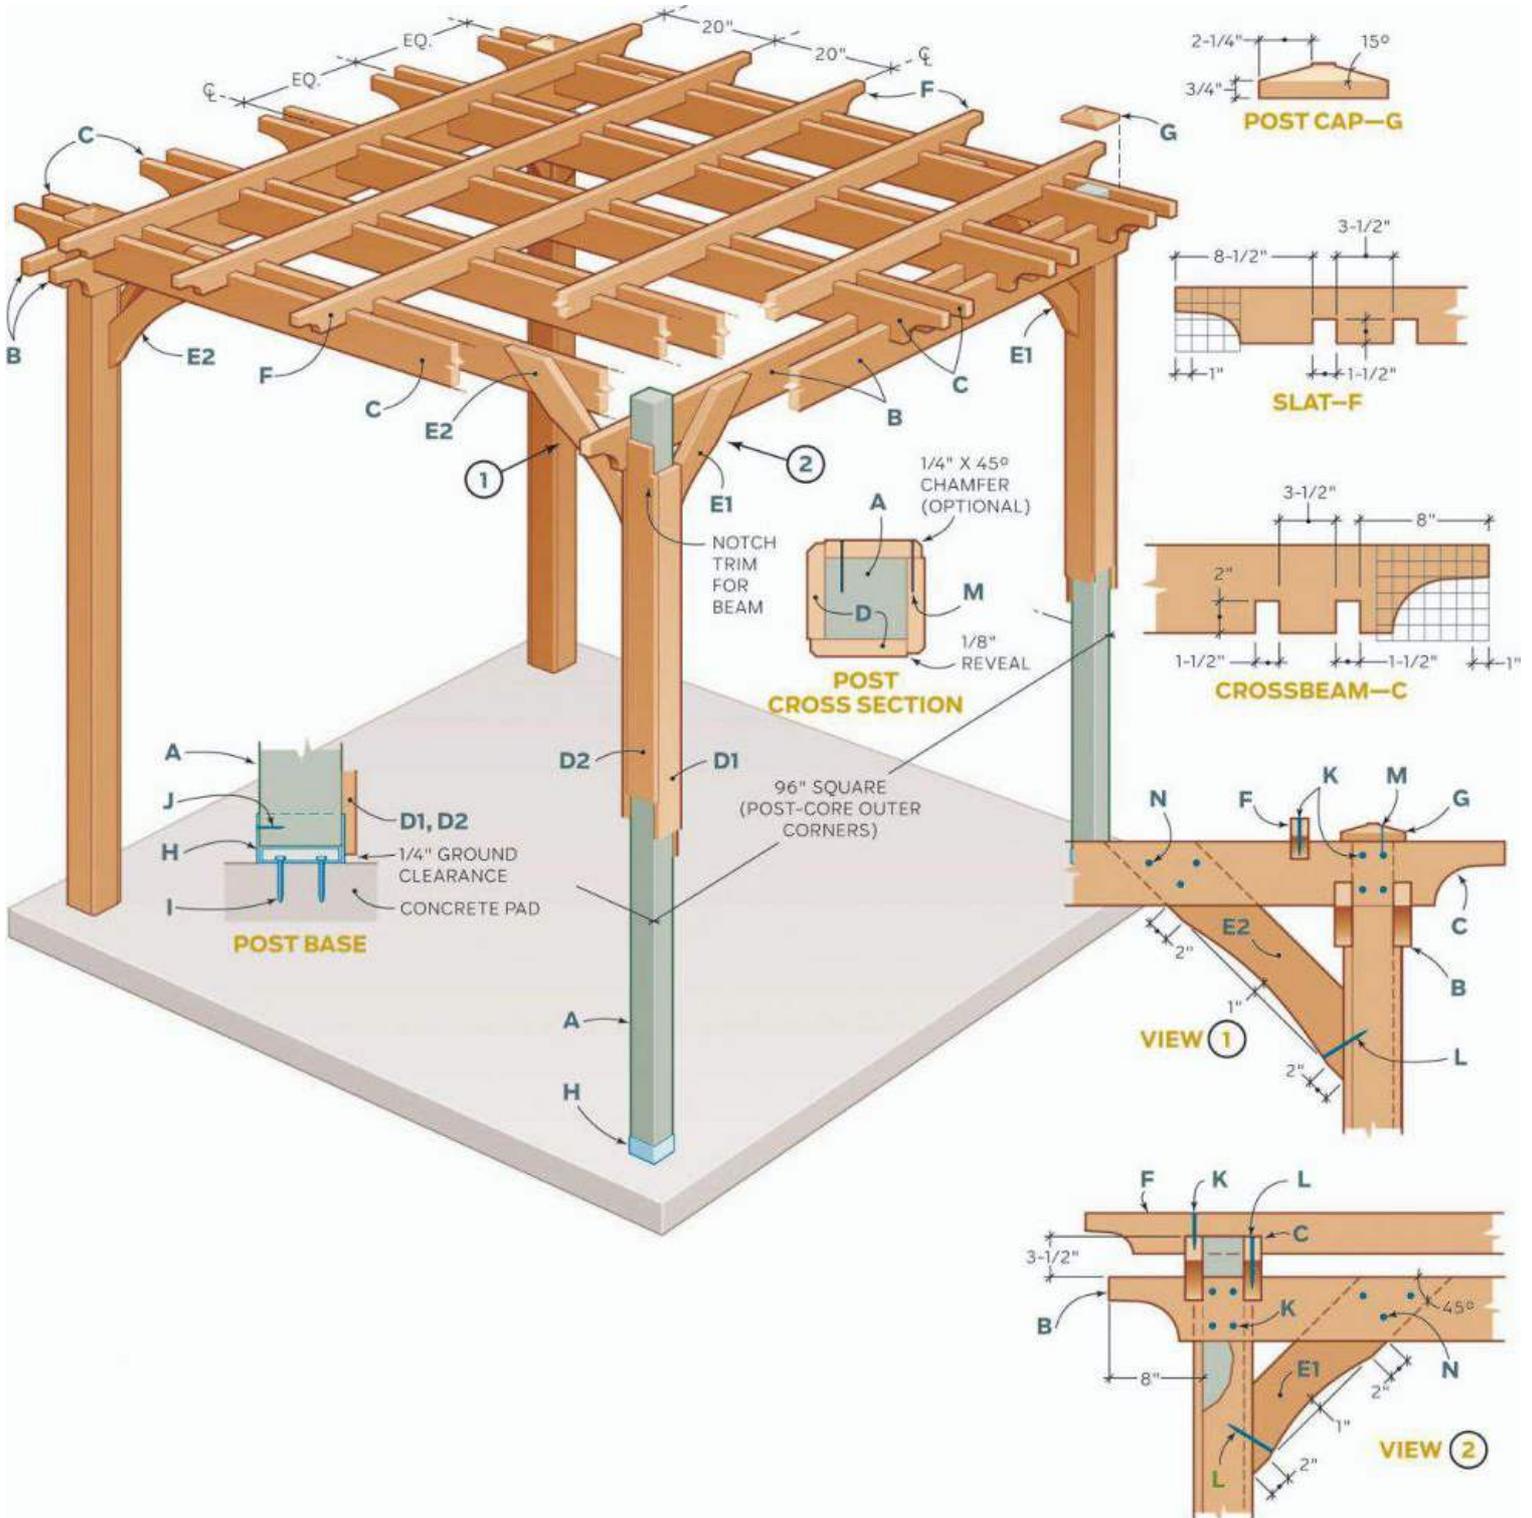


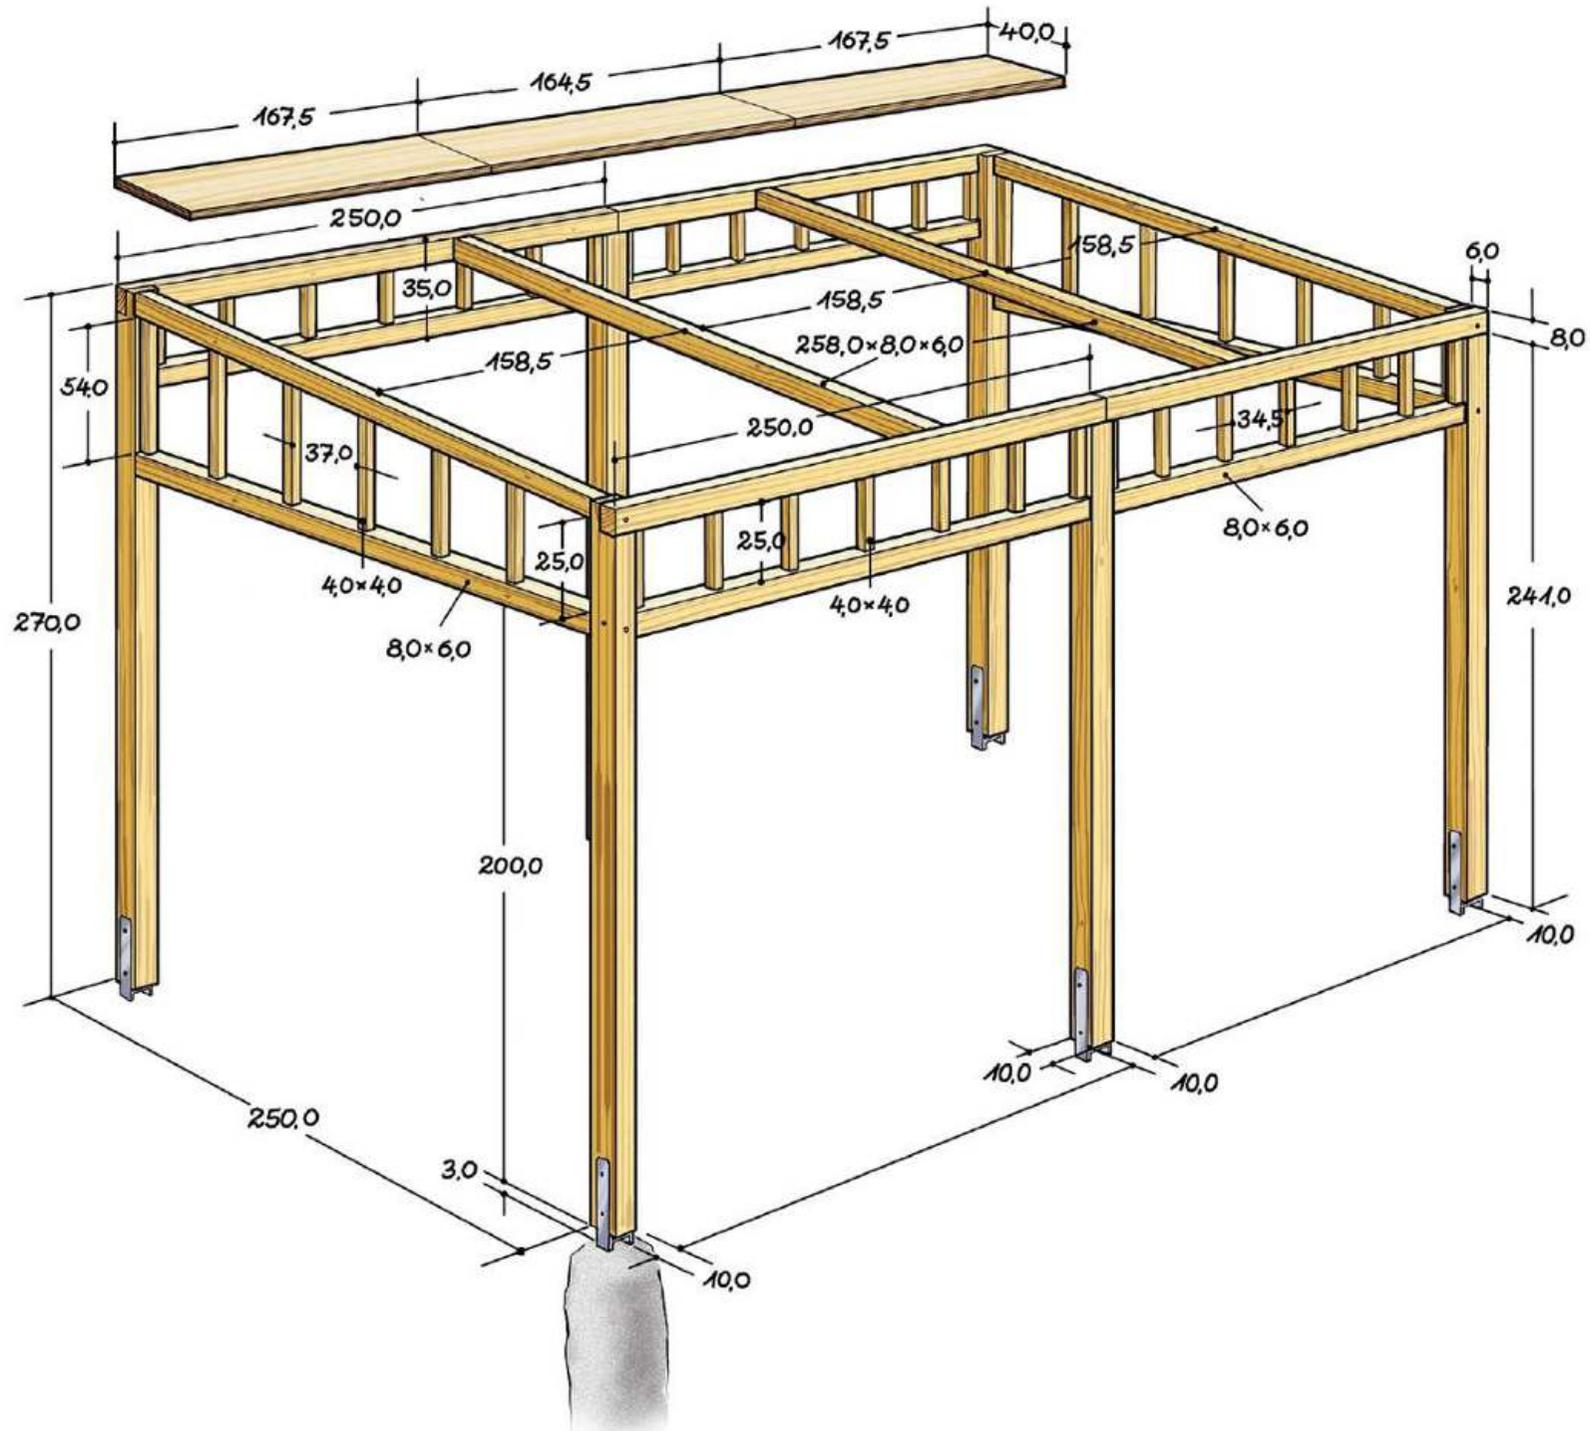

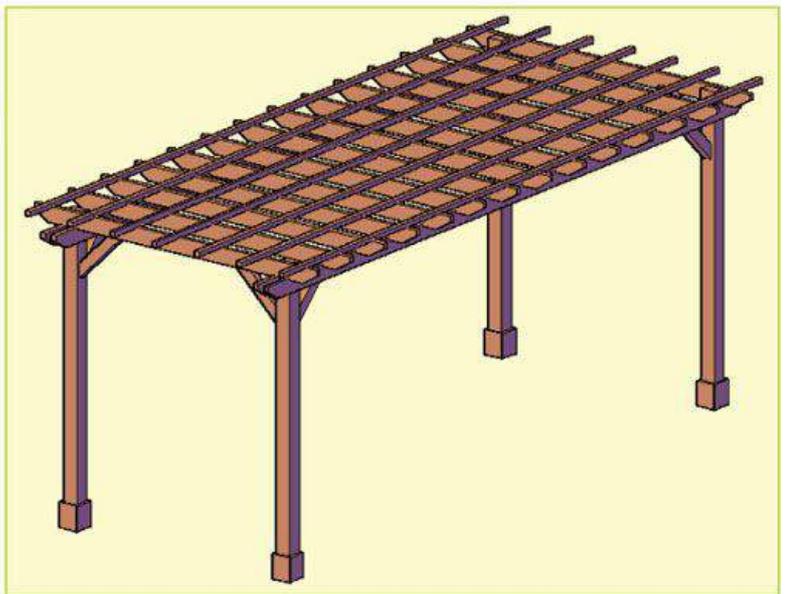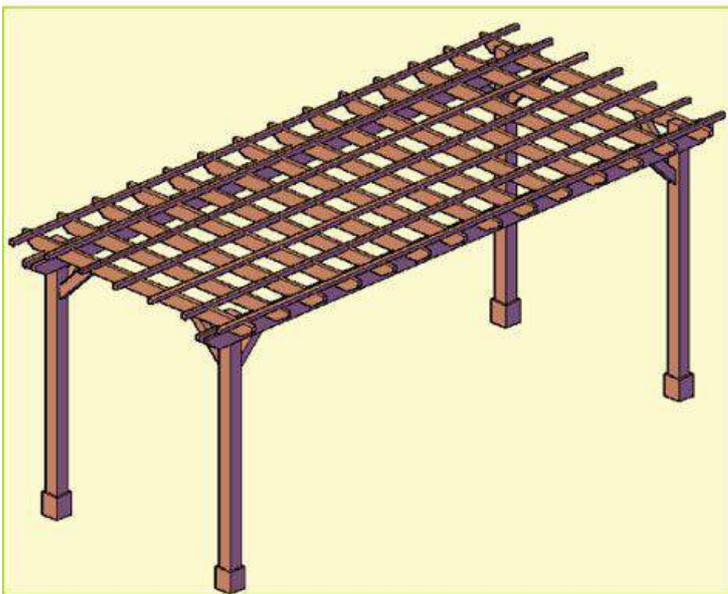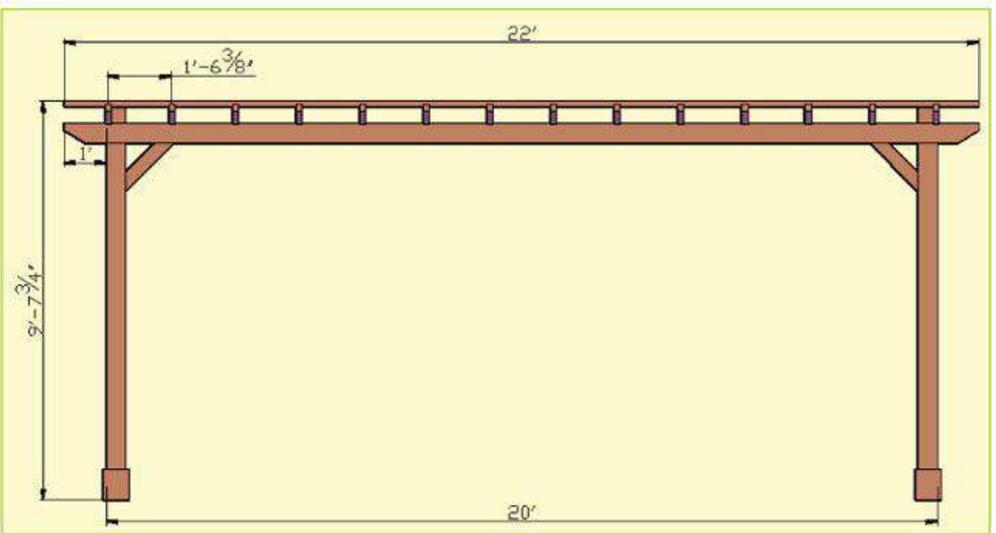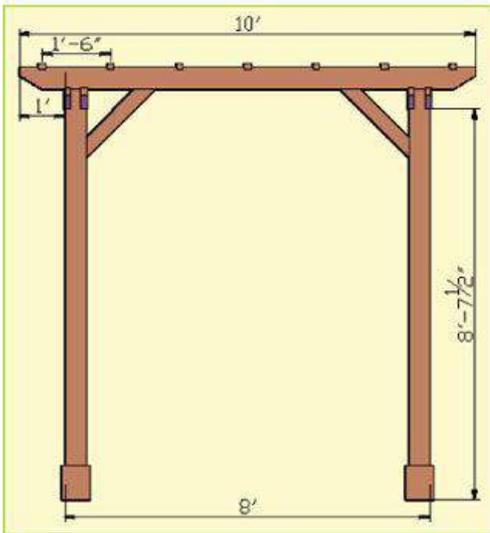
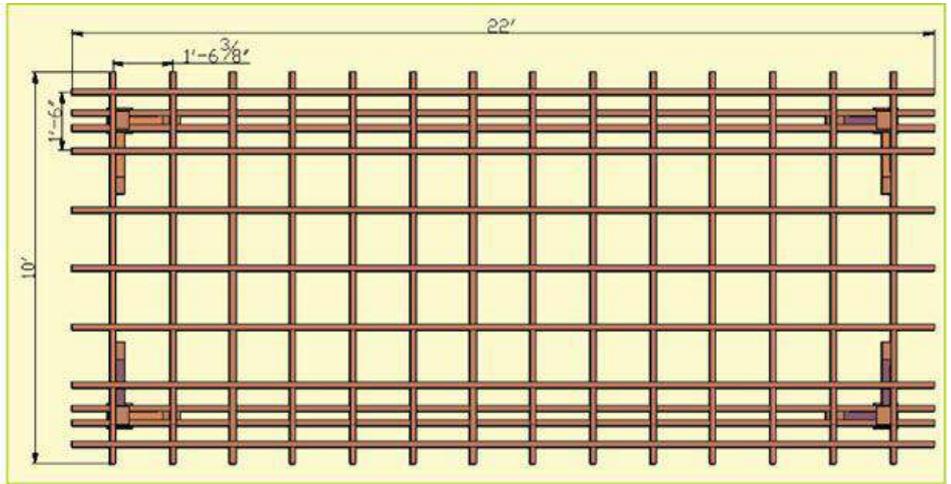


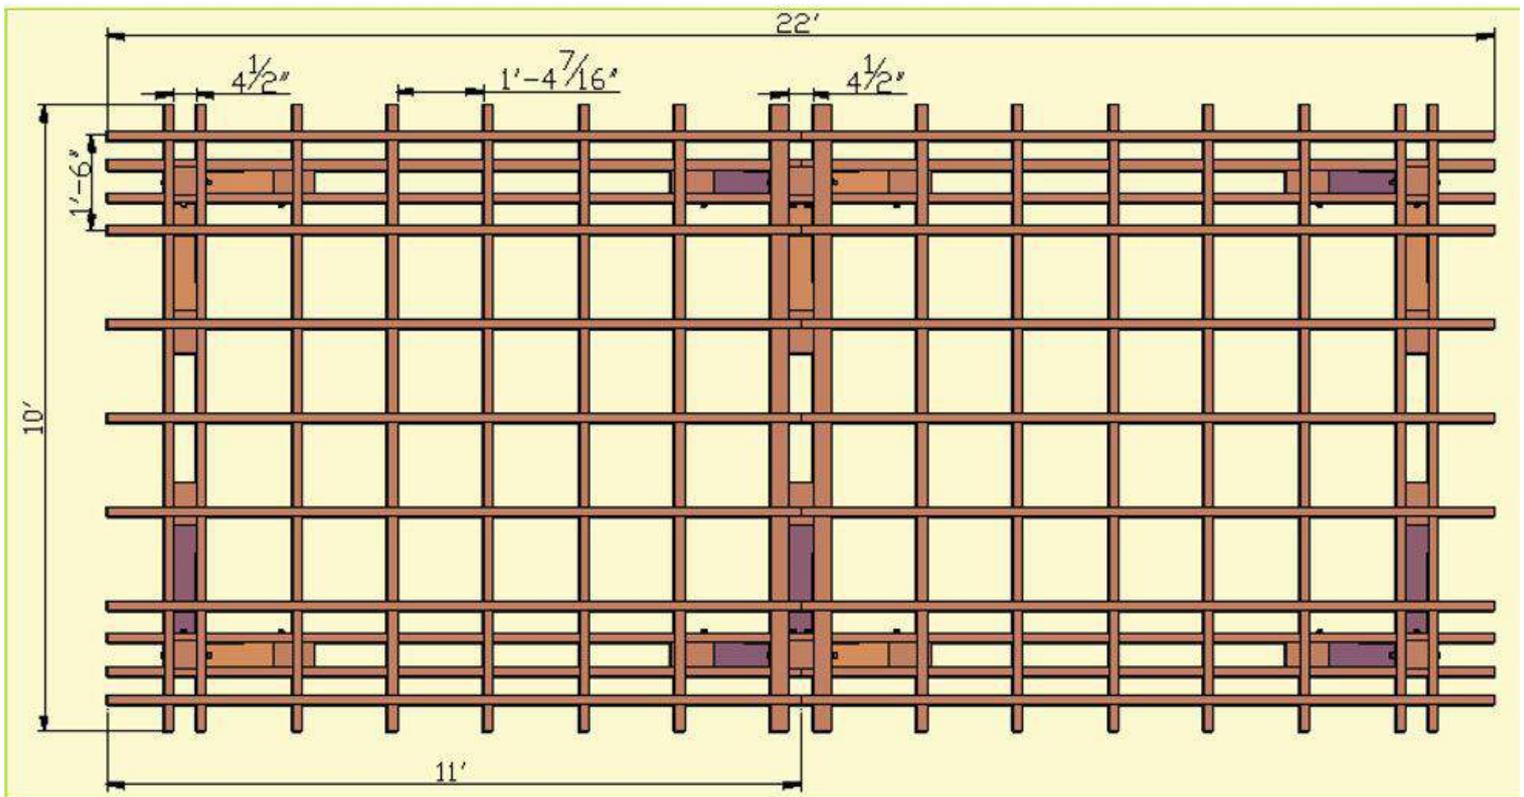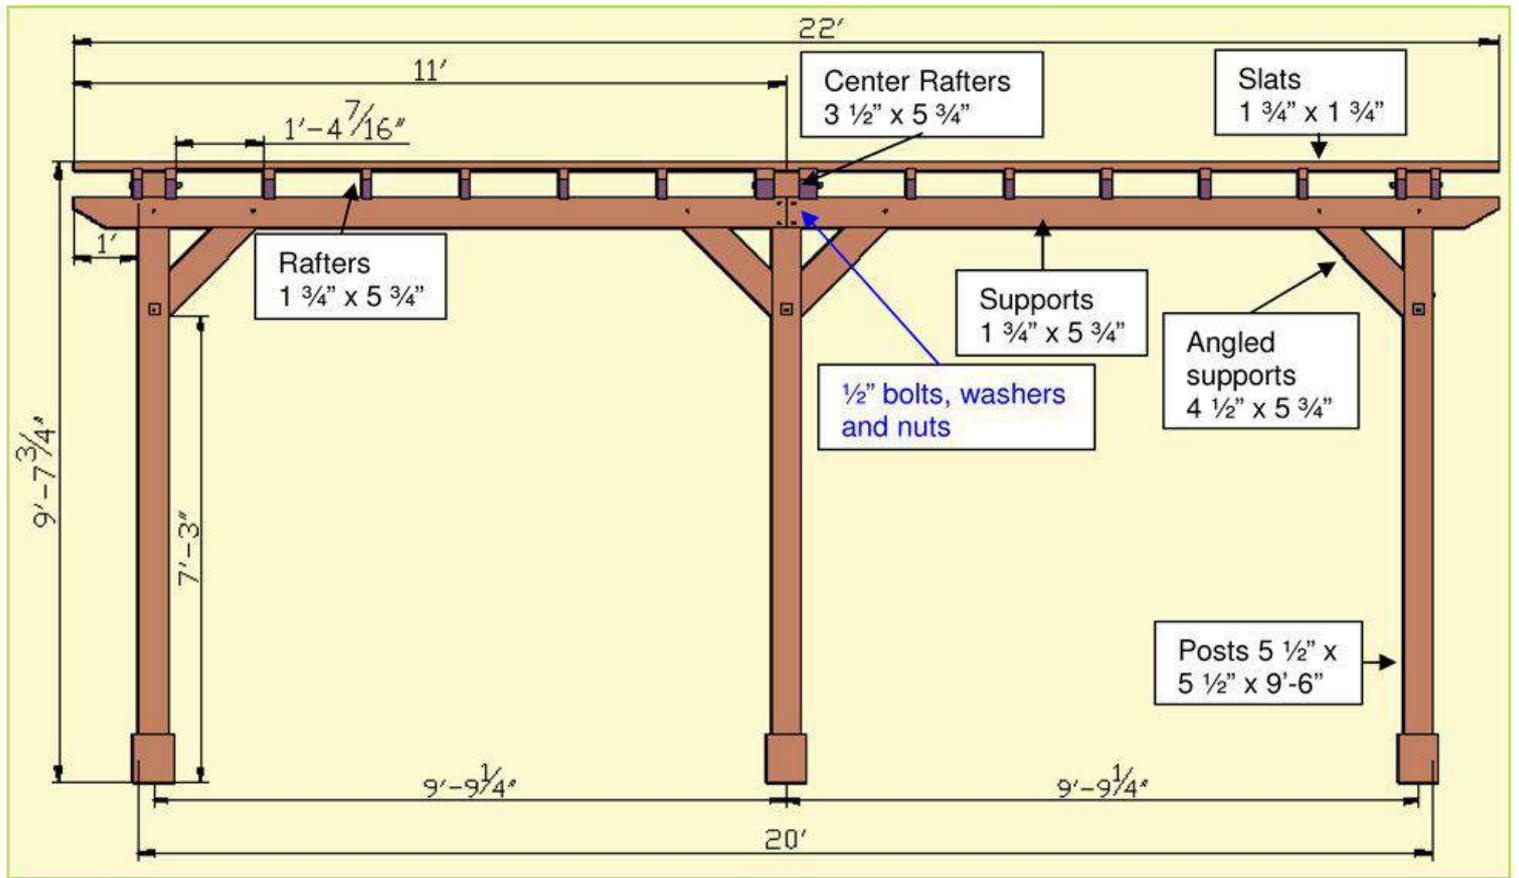


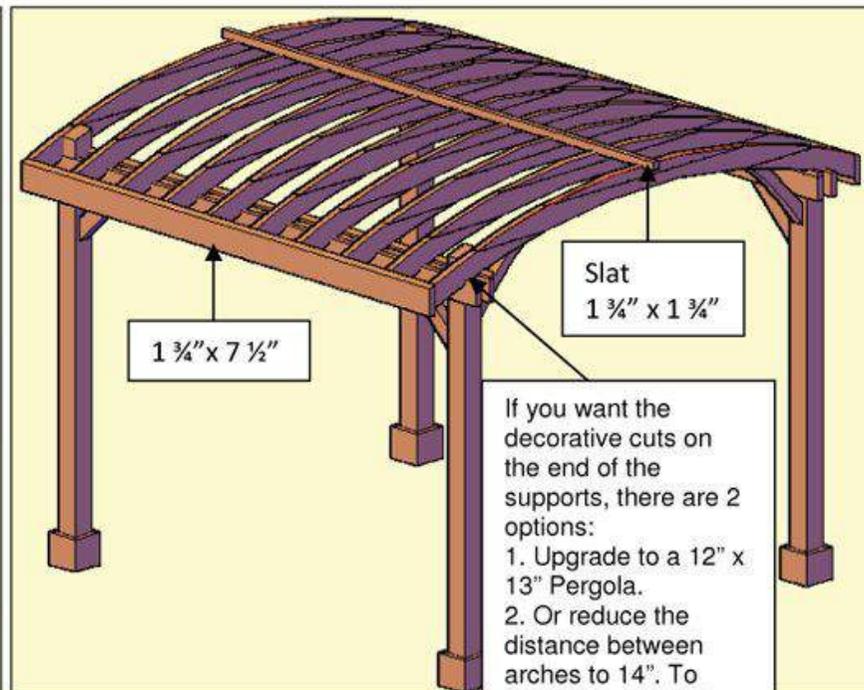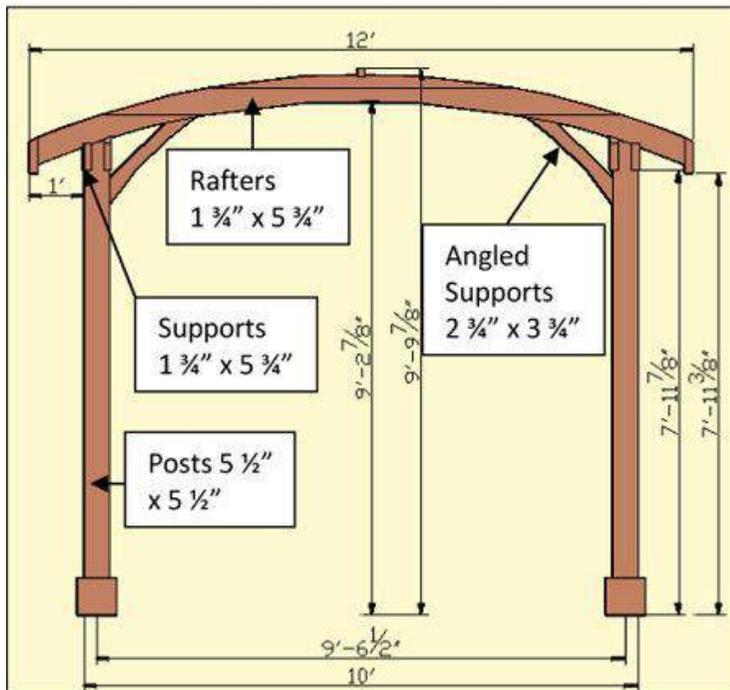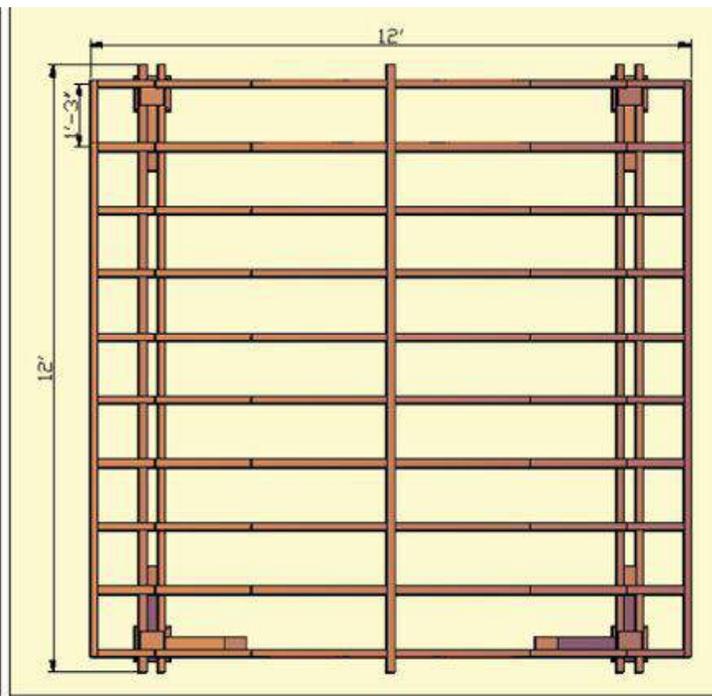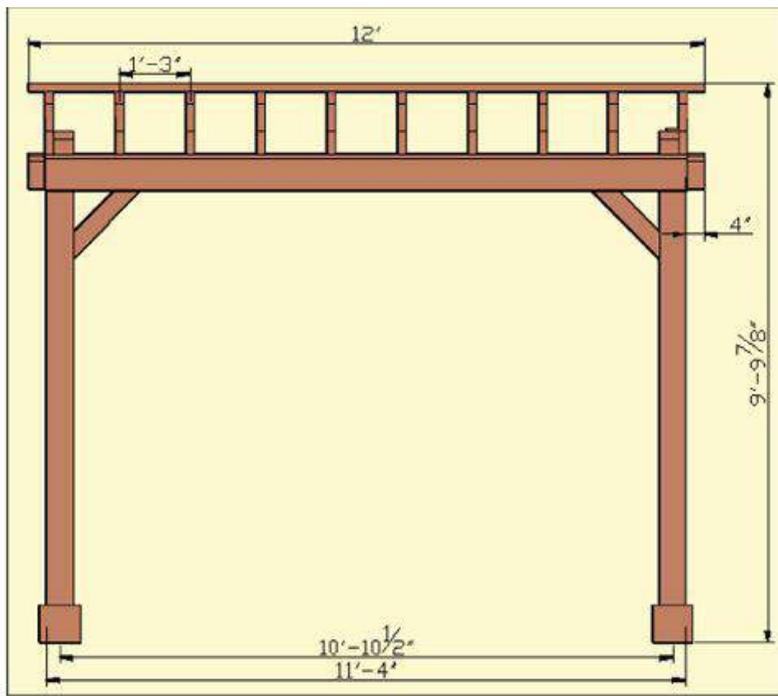


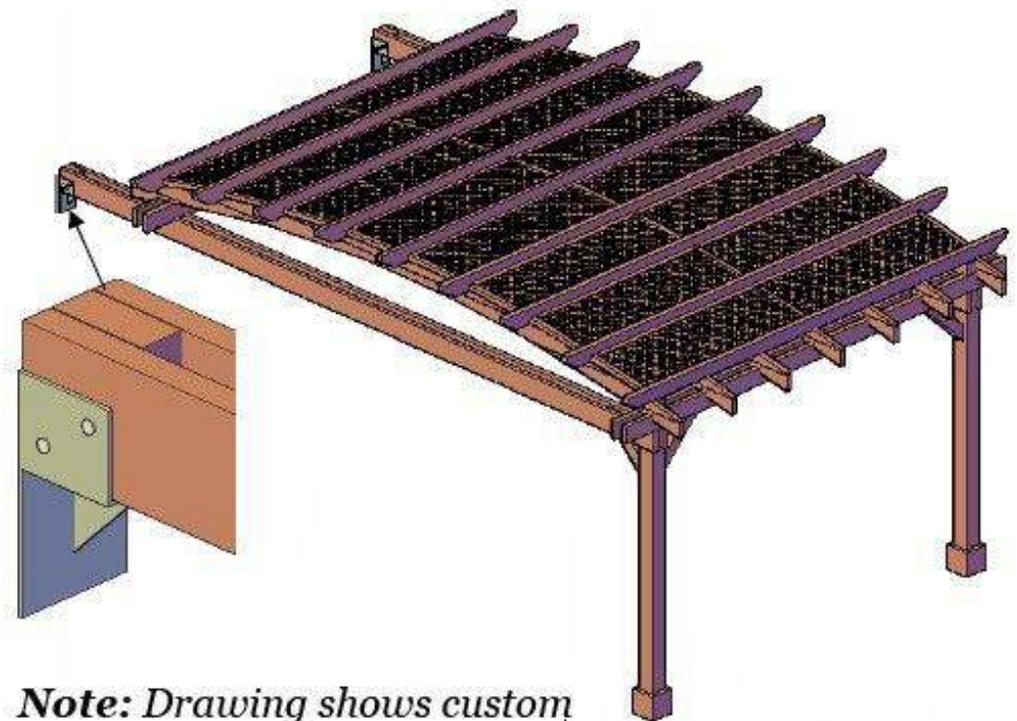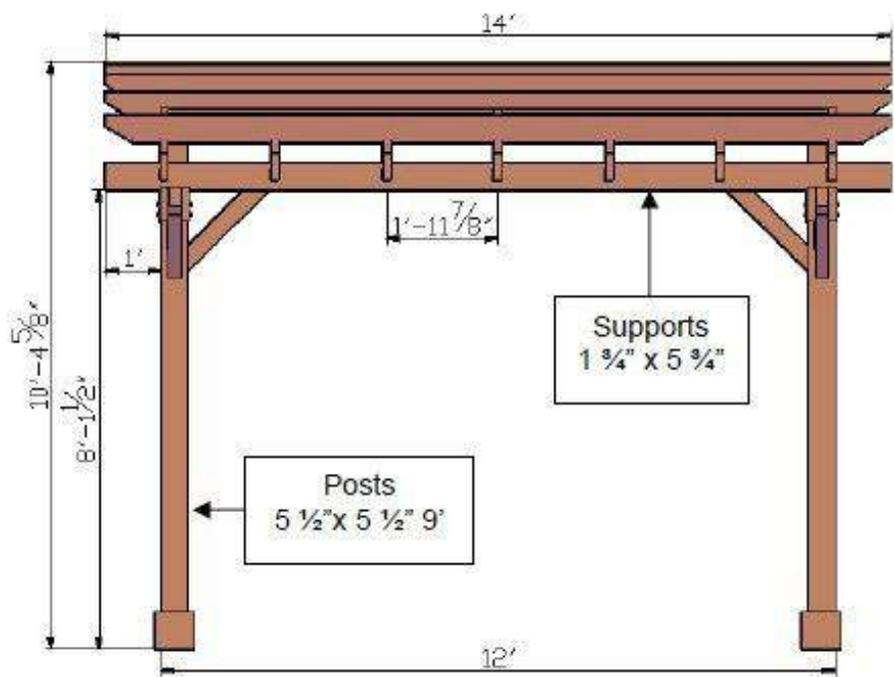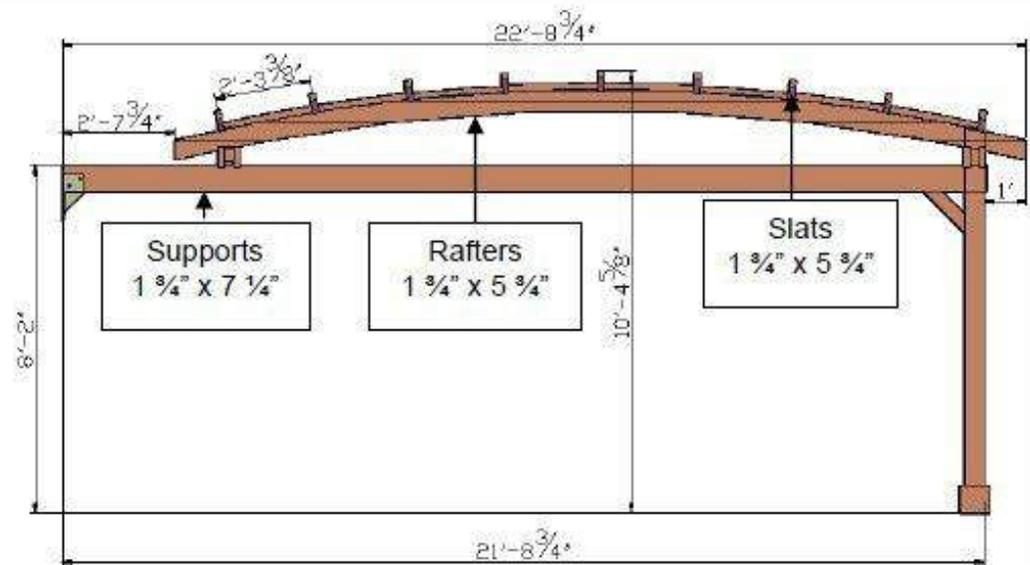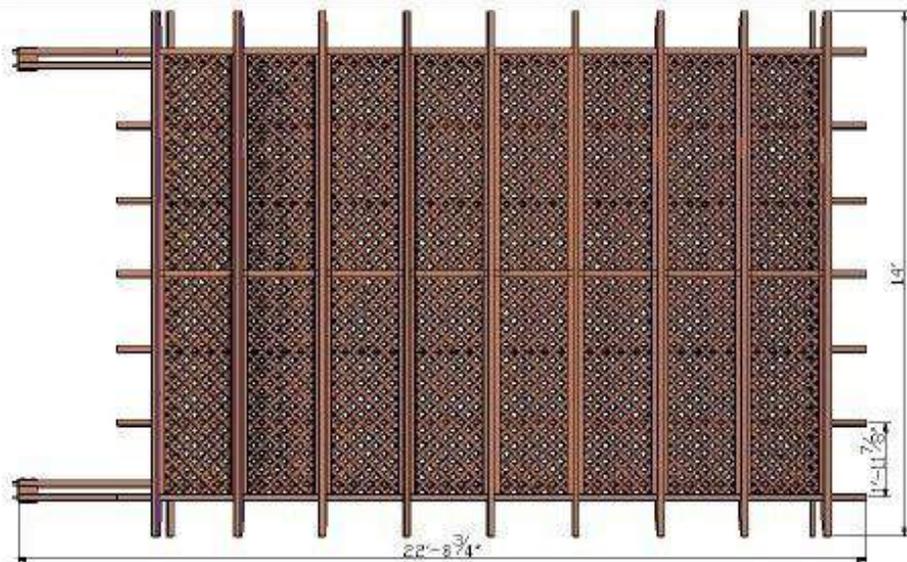



Note: Drawing shows custom steel anchors and extra supports to clear a low eave.

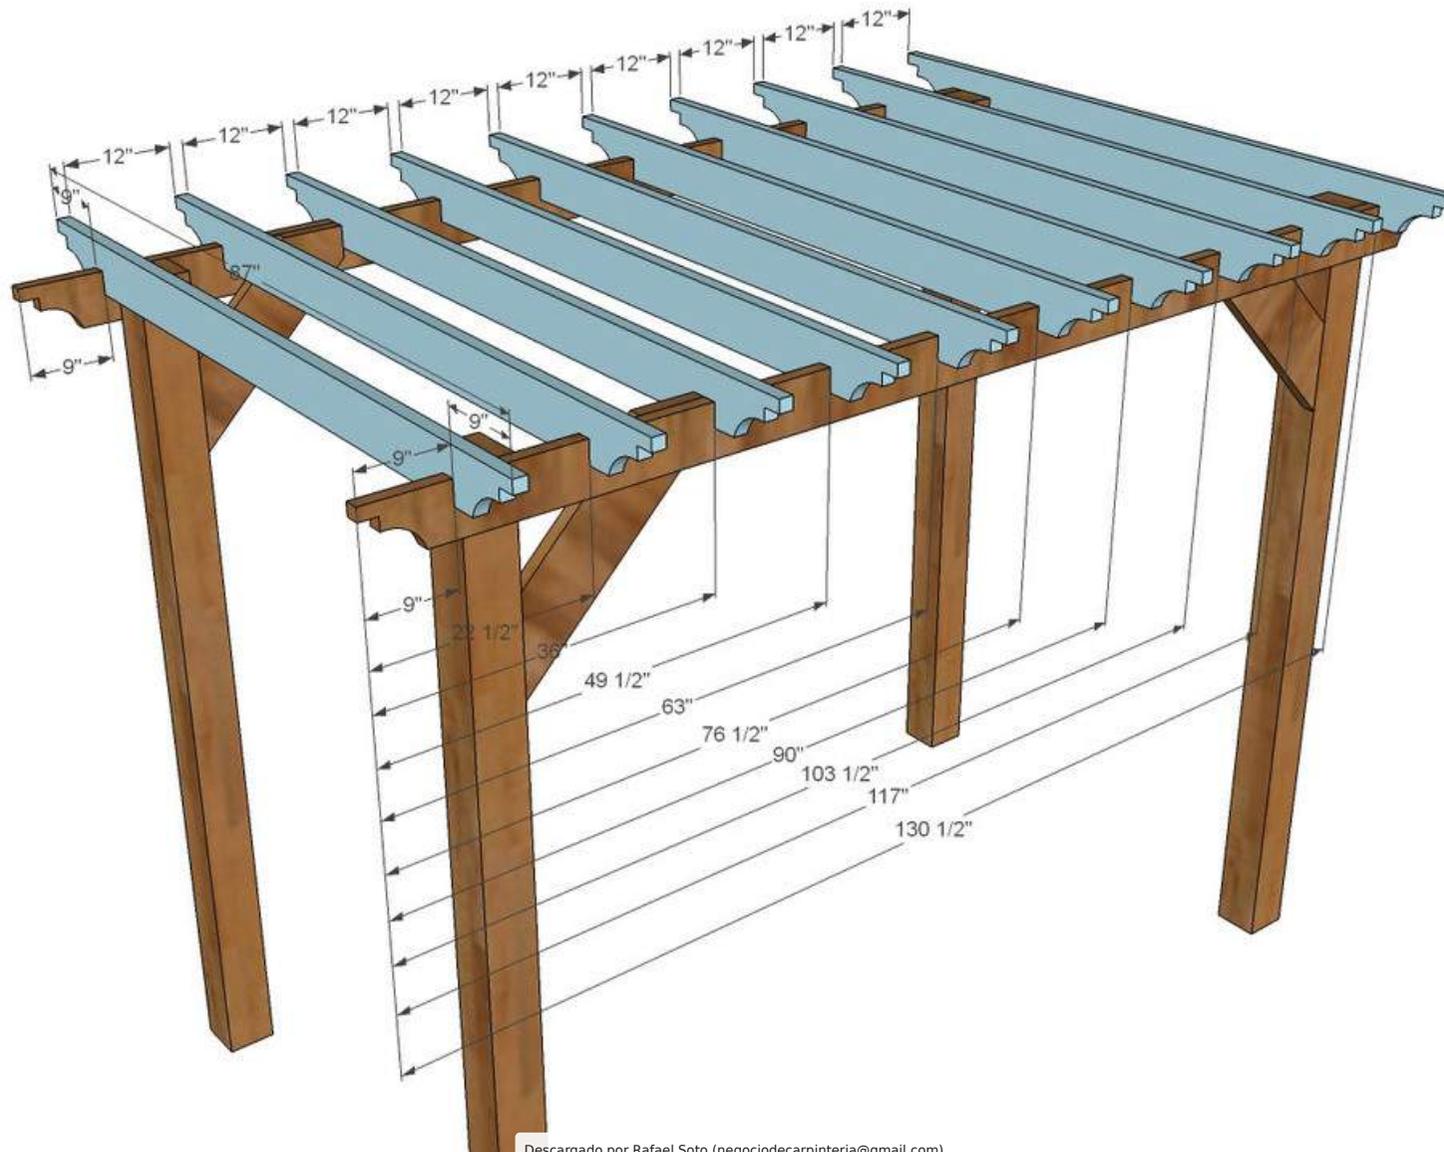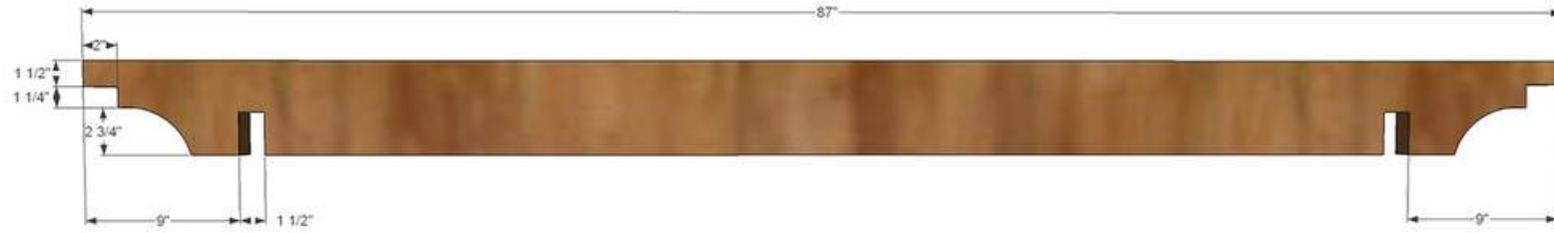


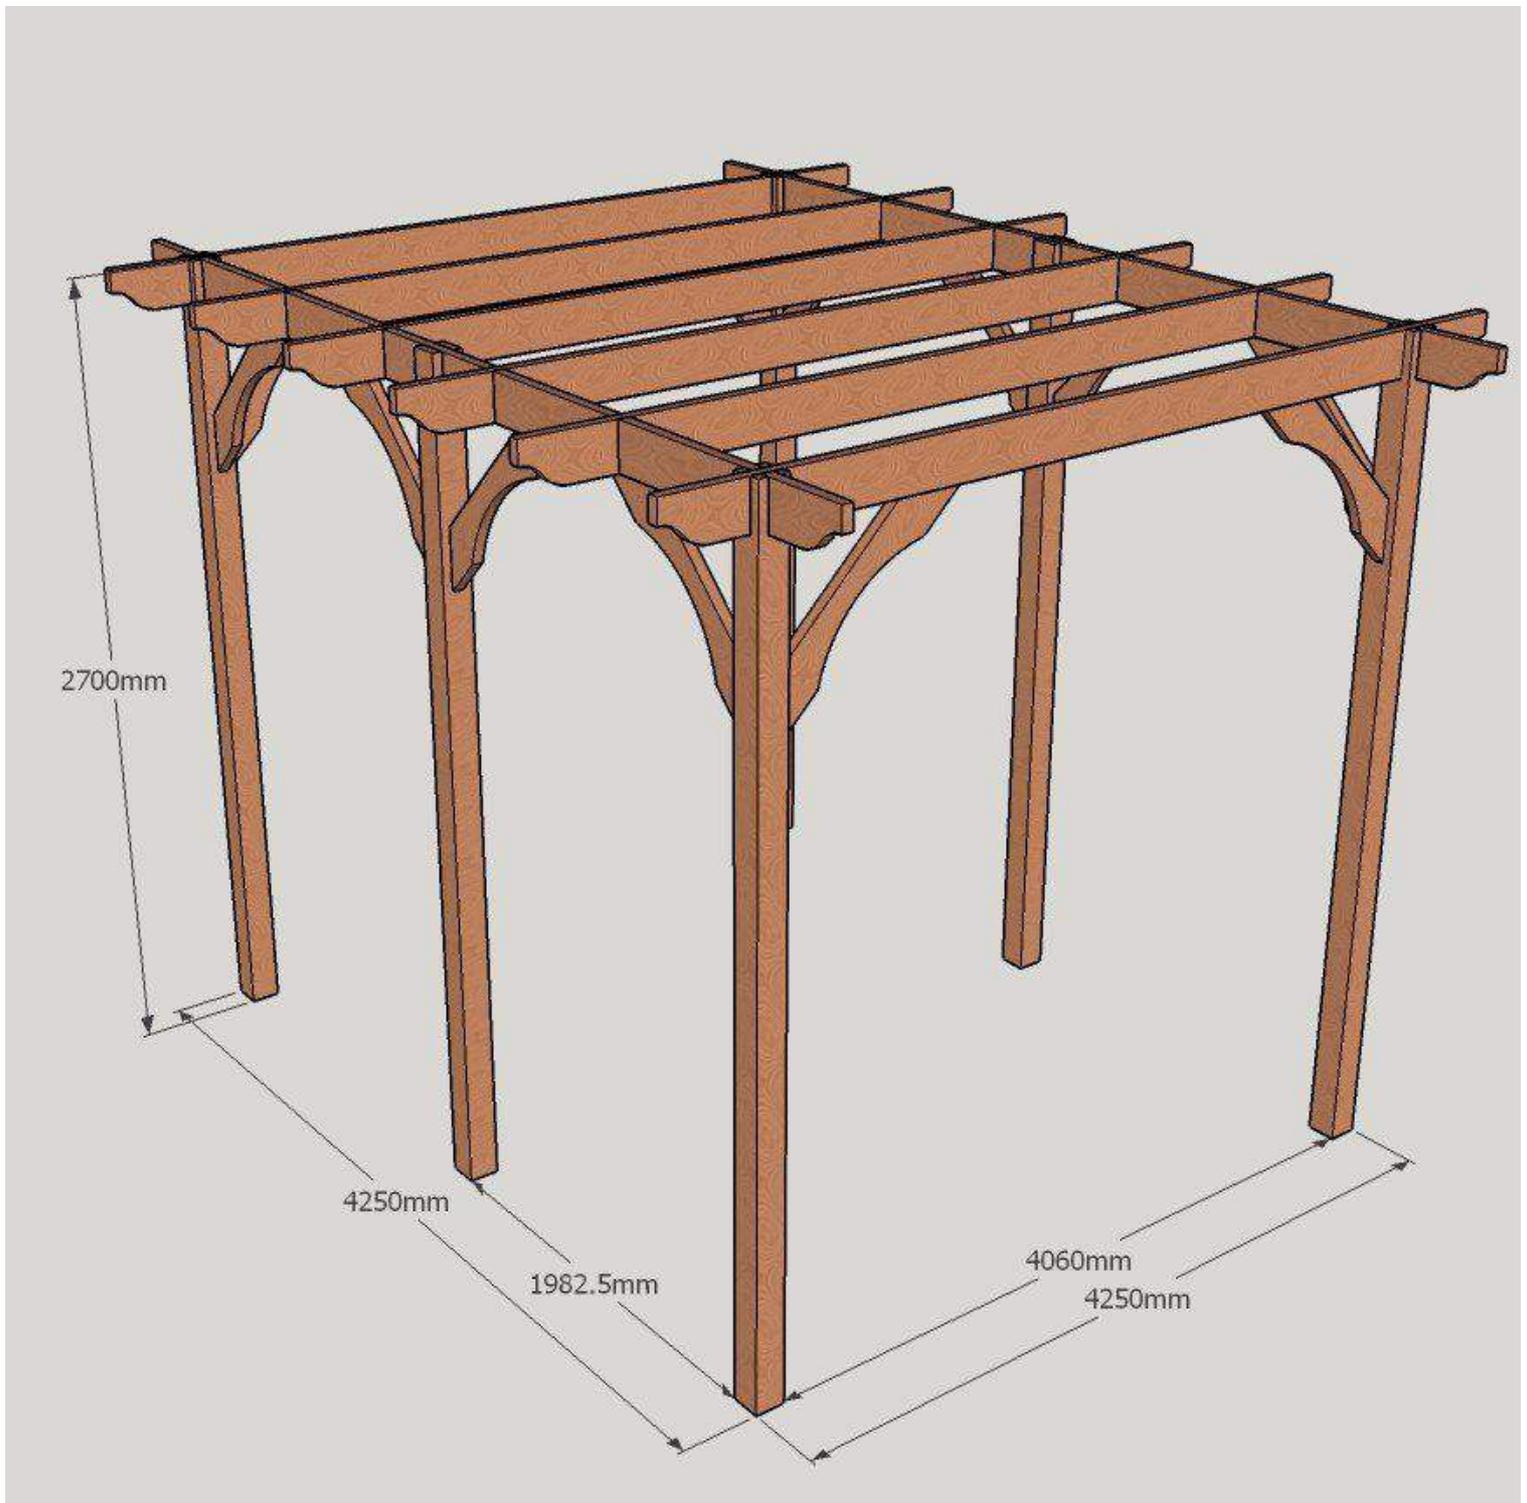


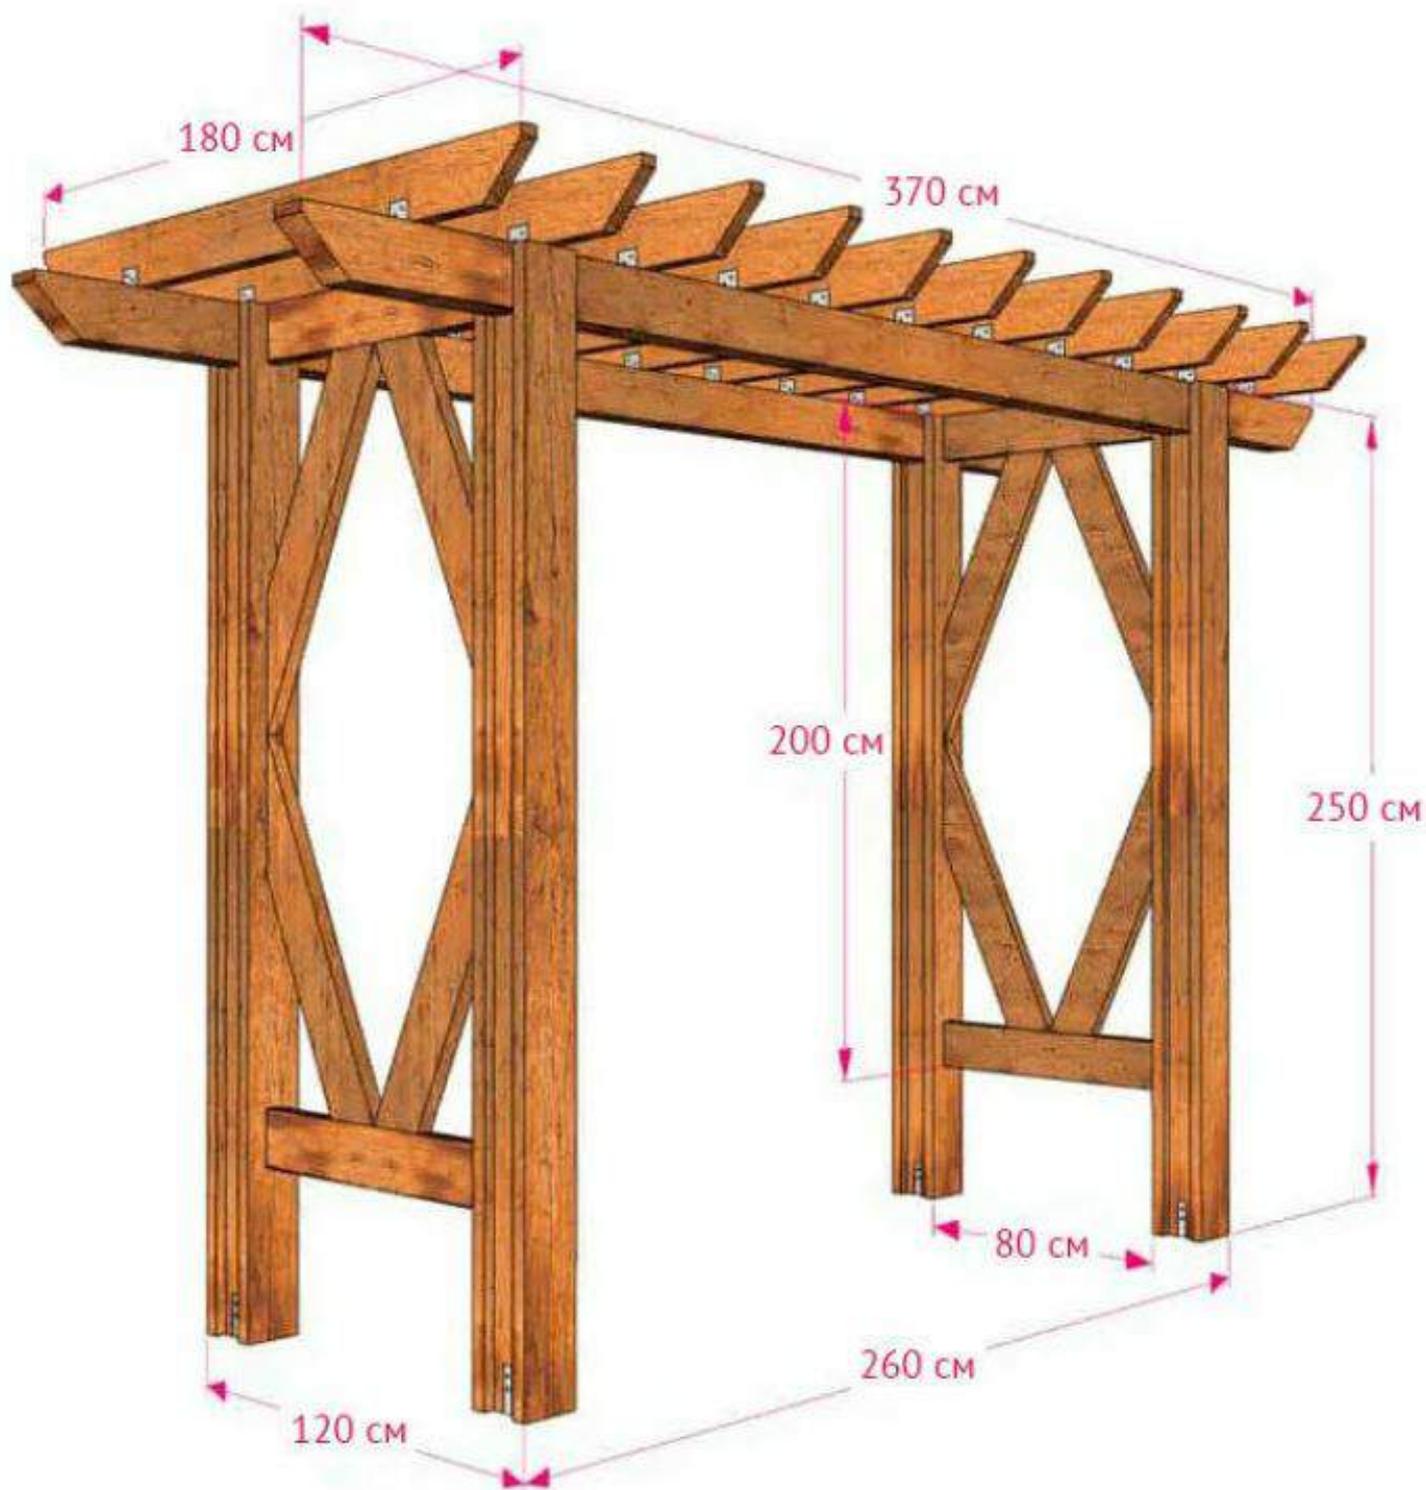


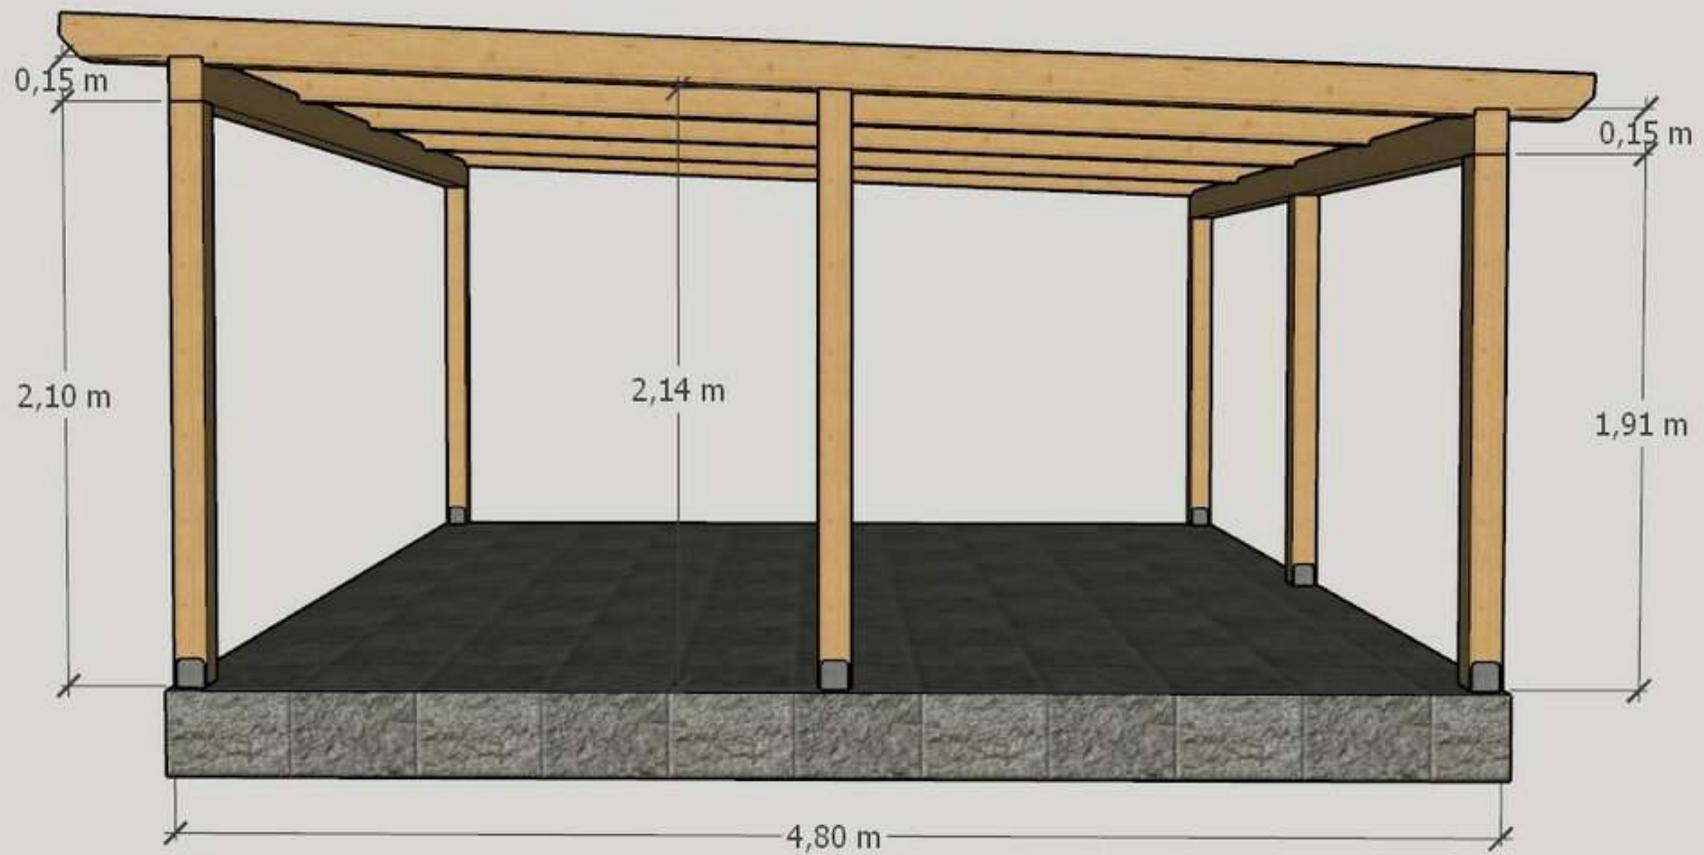

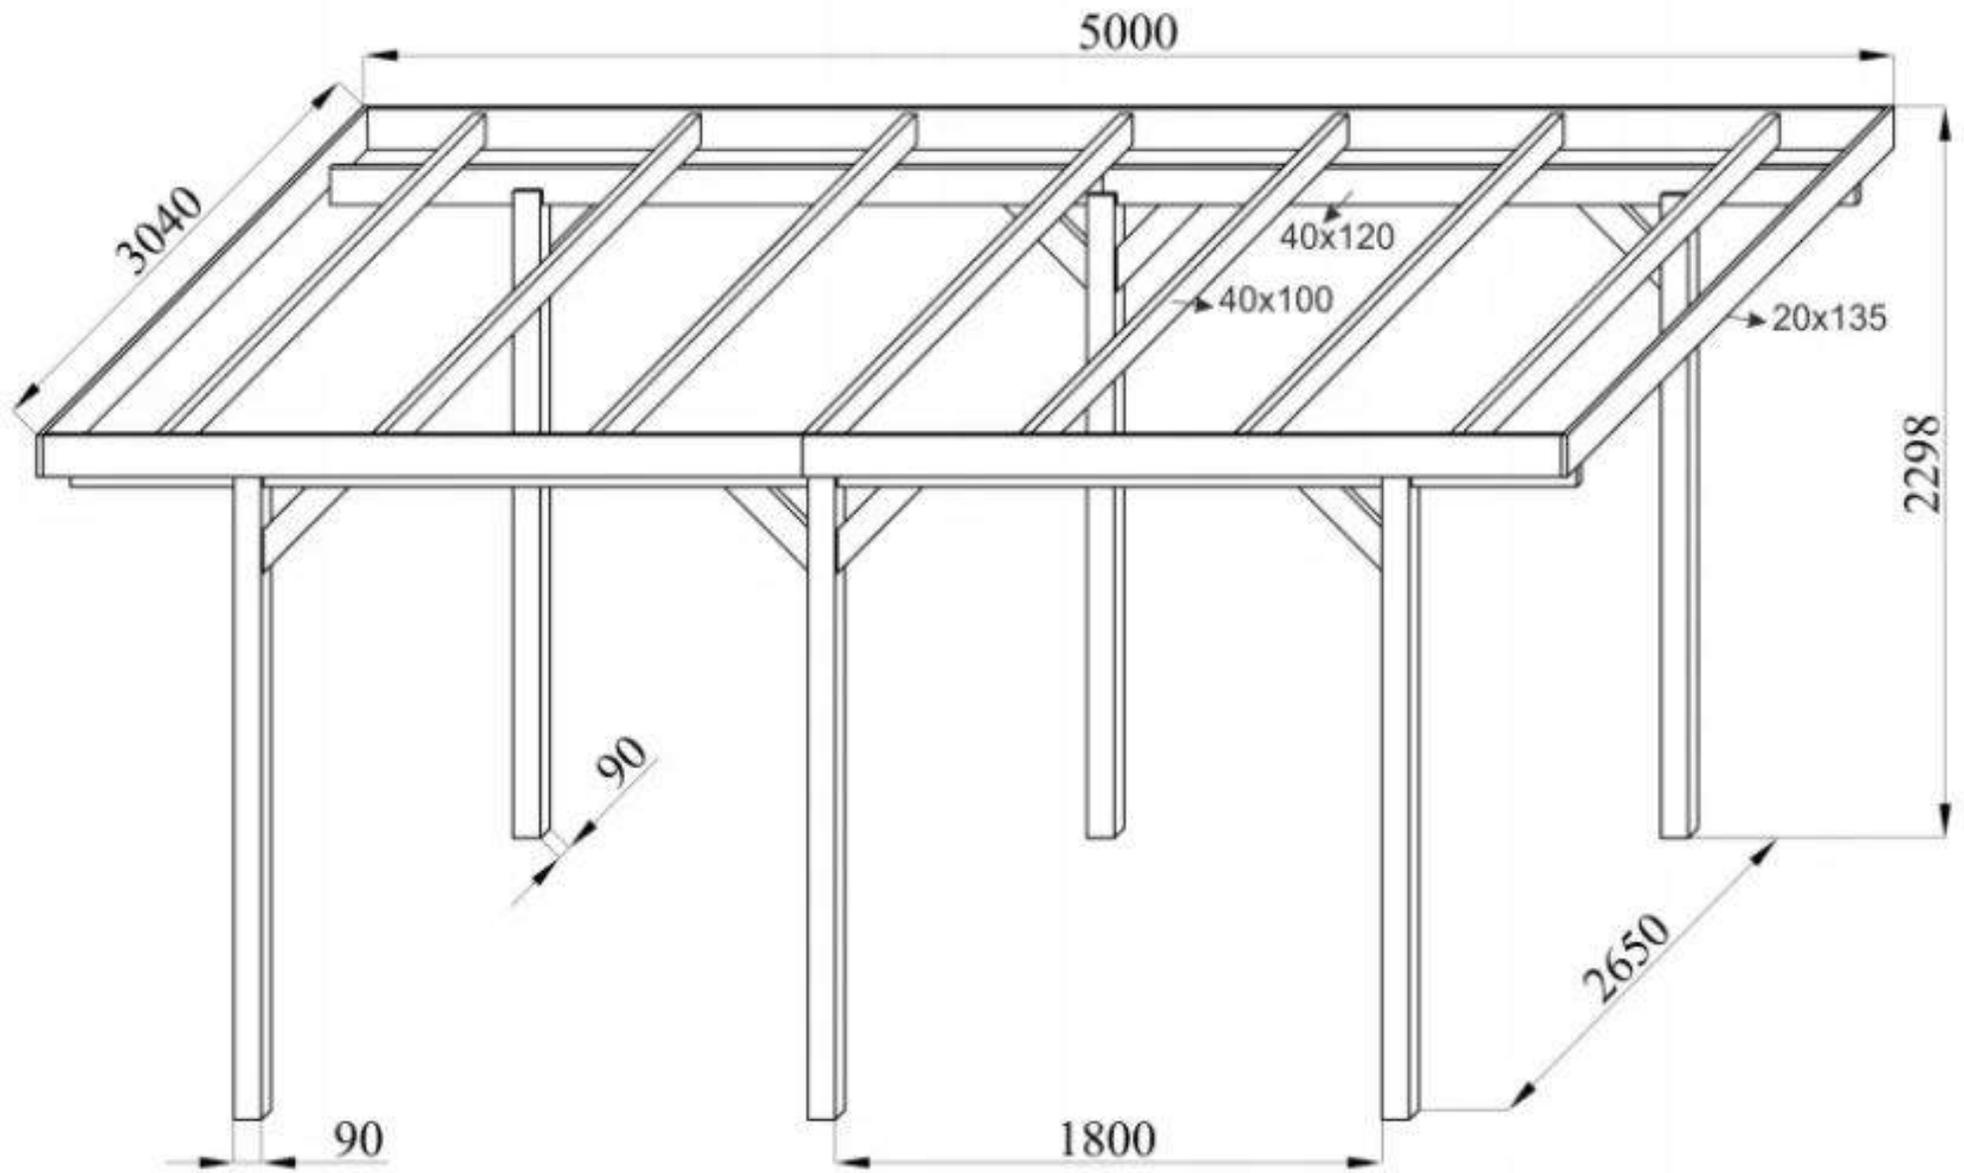


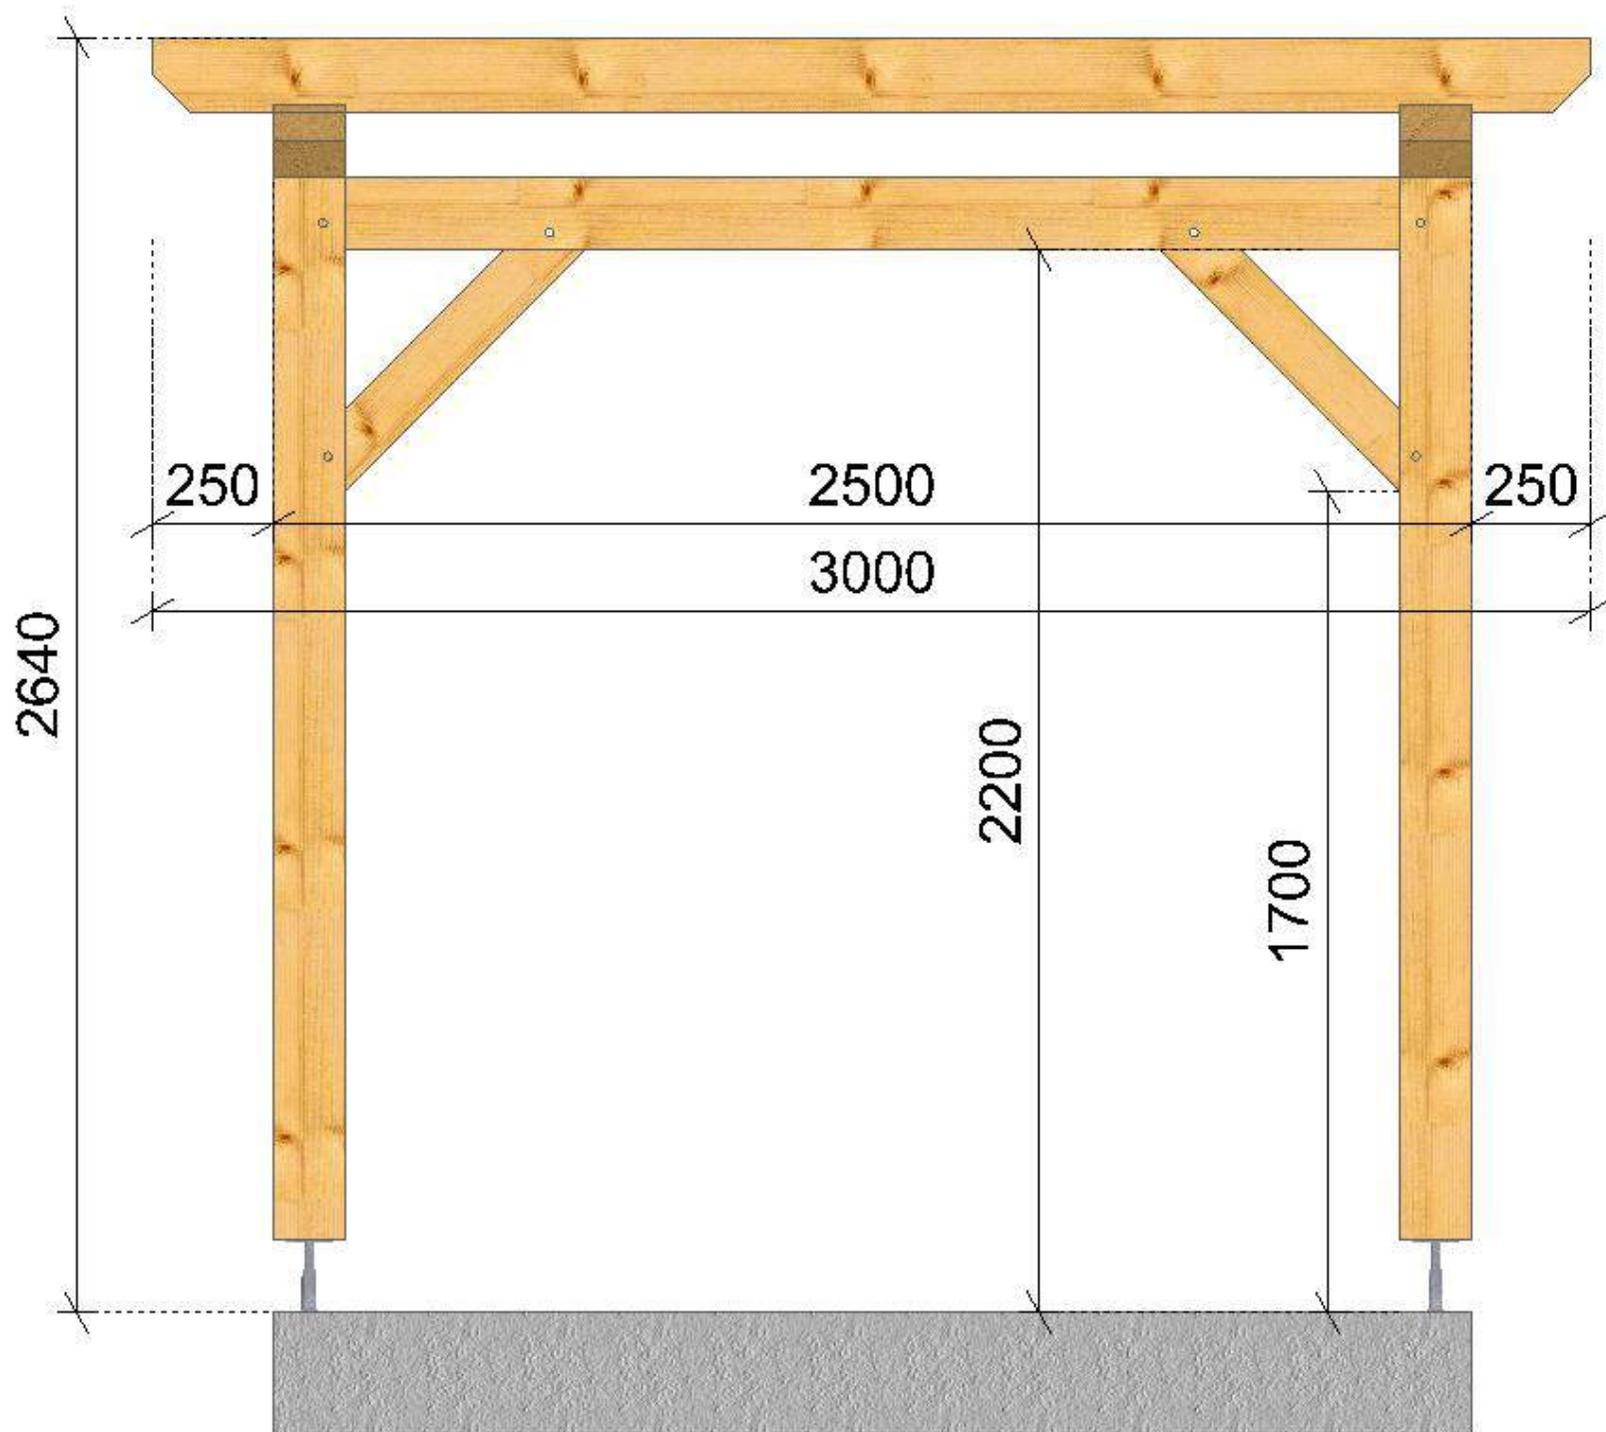


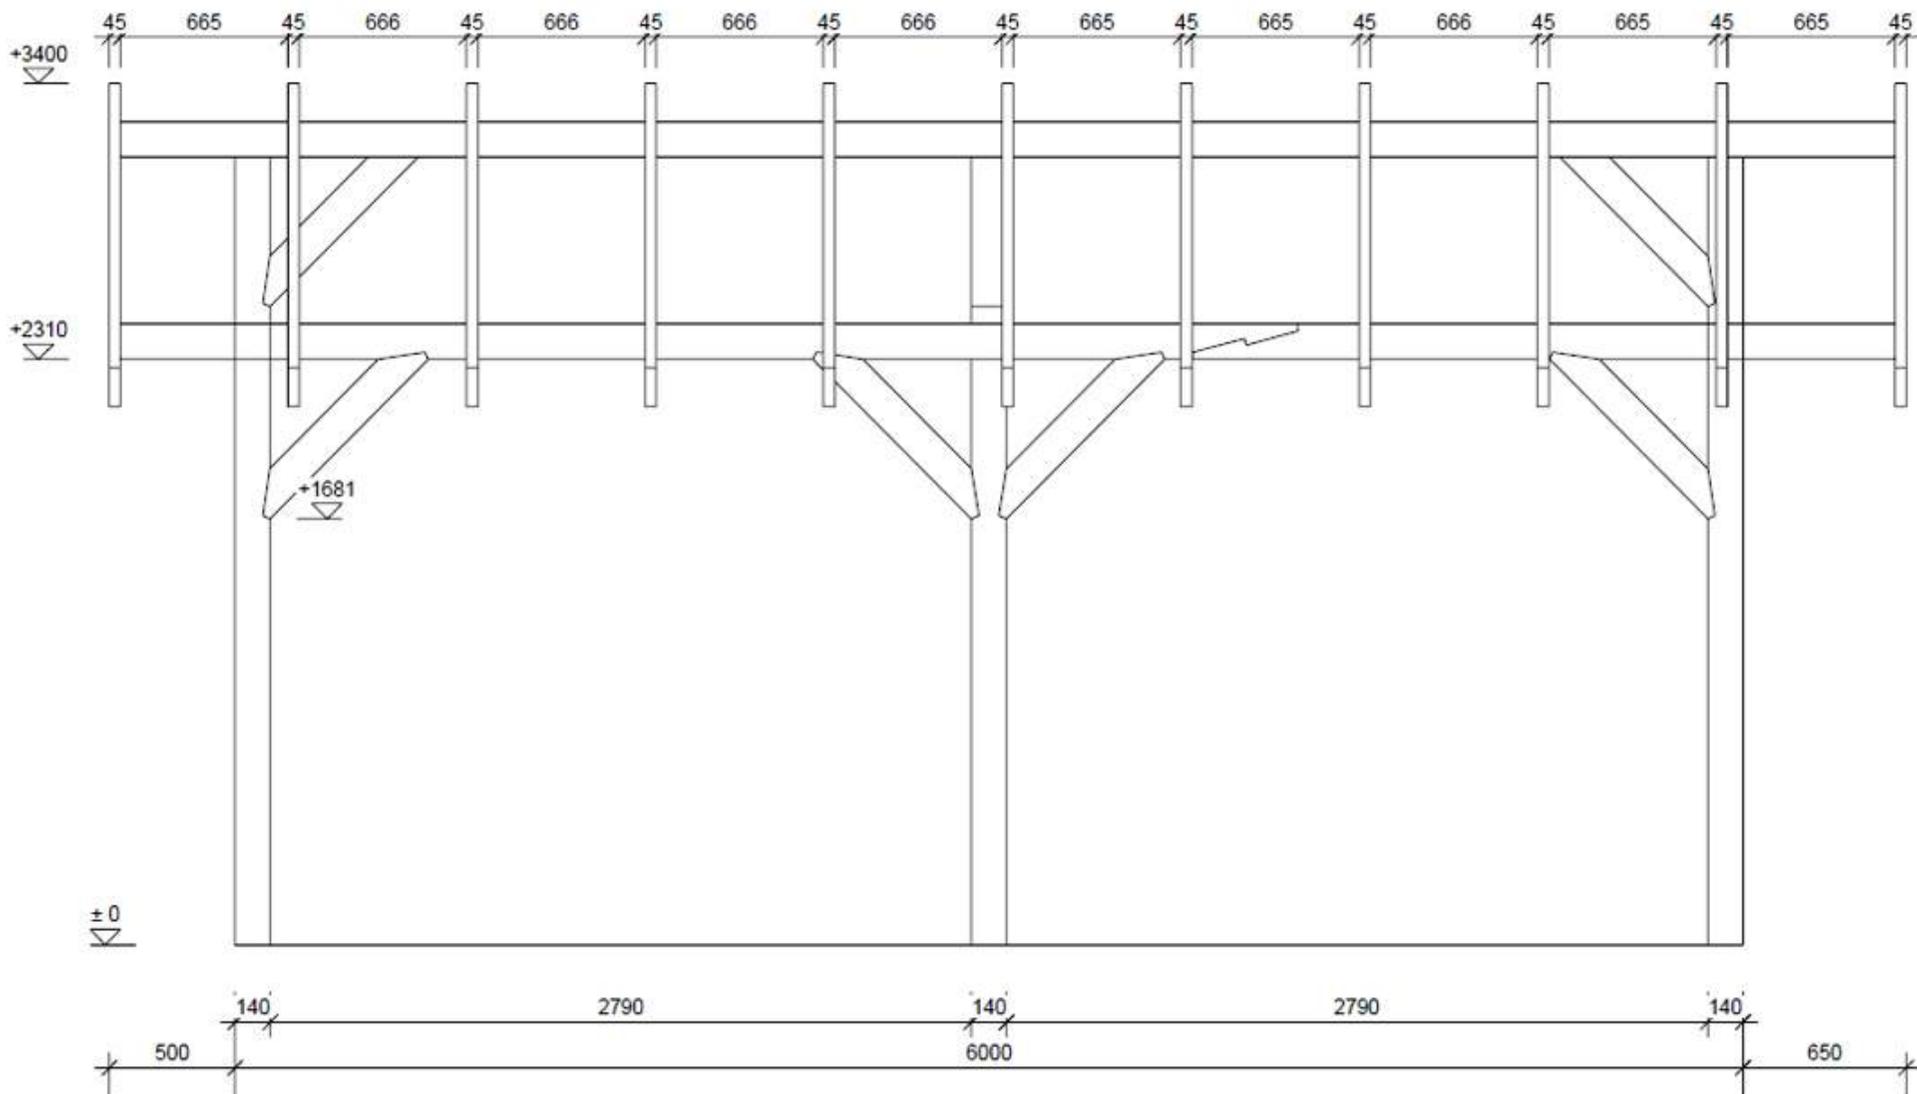


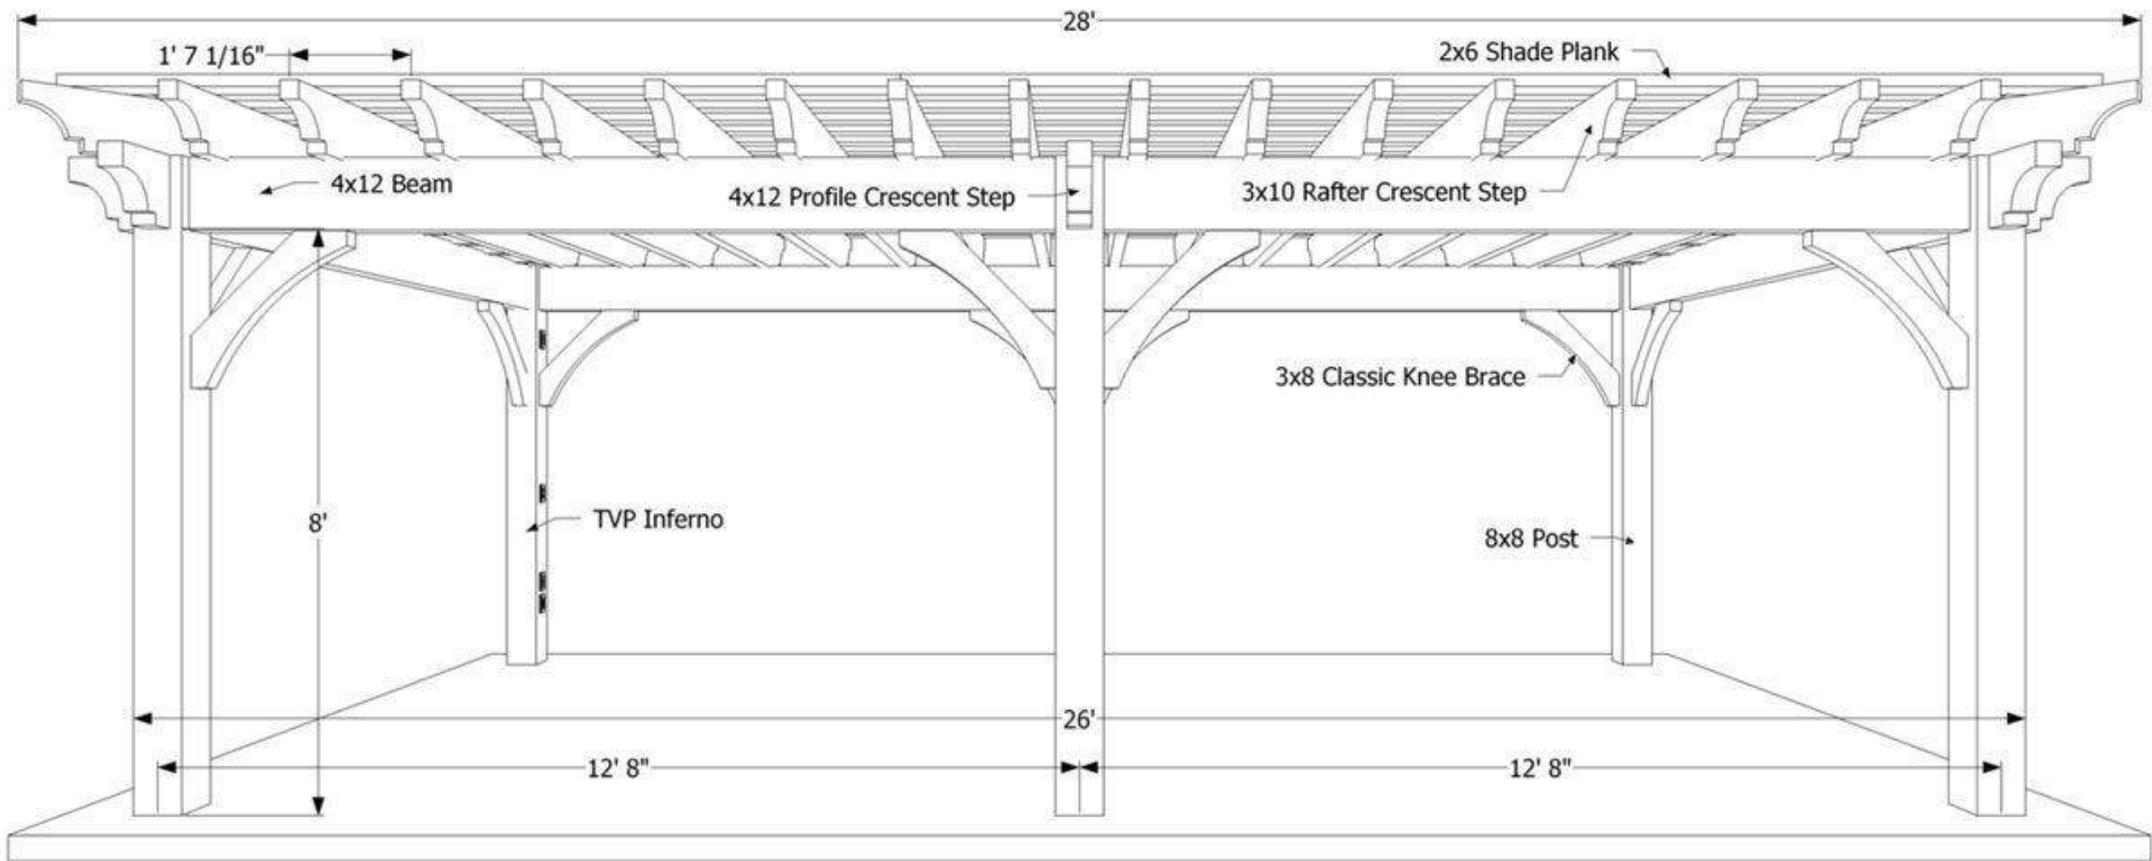

© 2015 Western Timber Frame All Rights Reserved

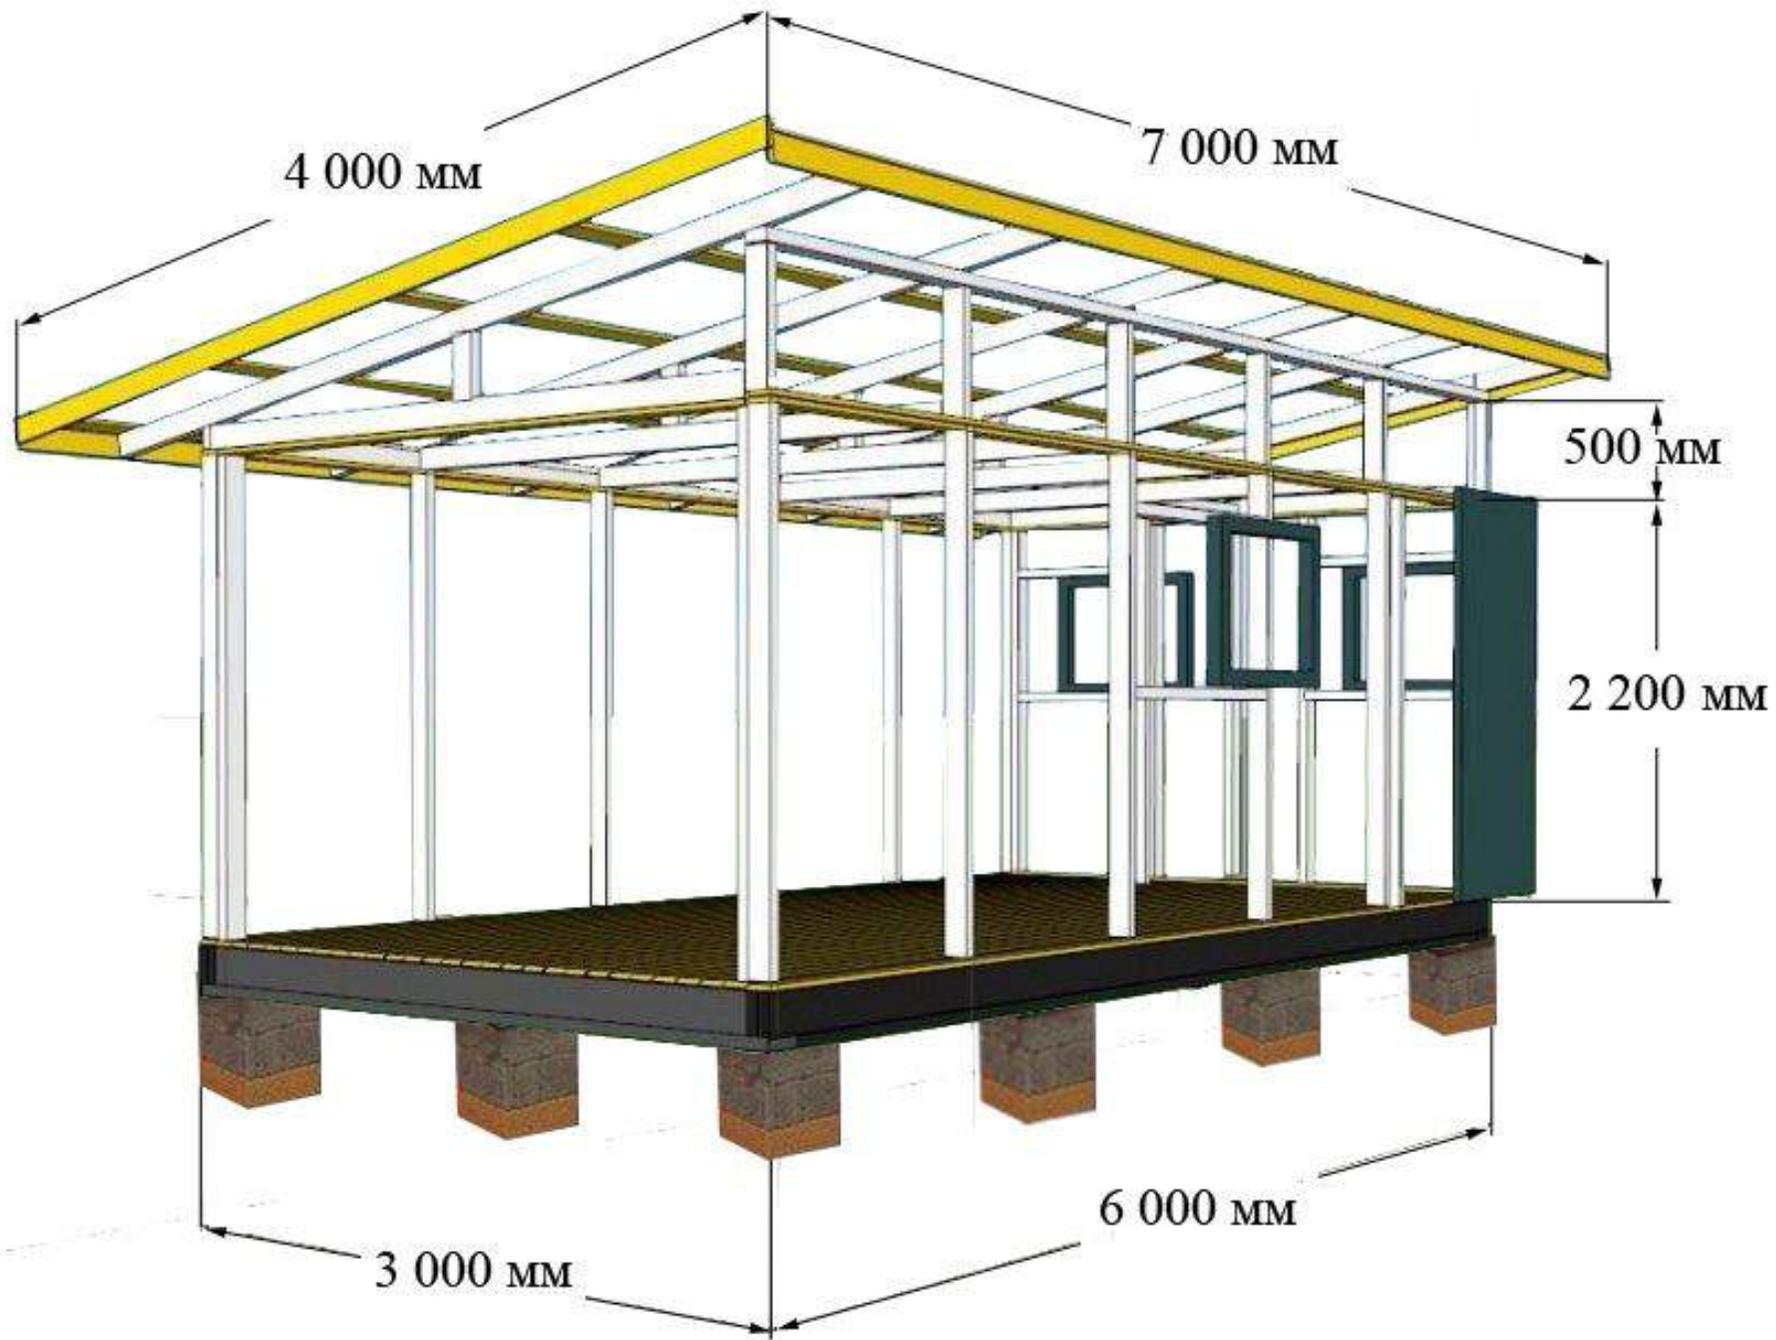


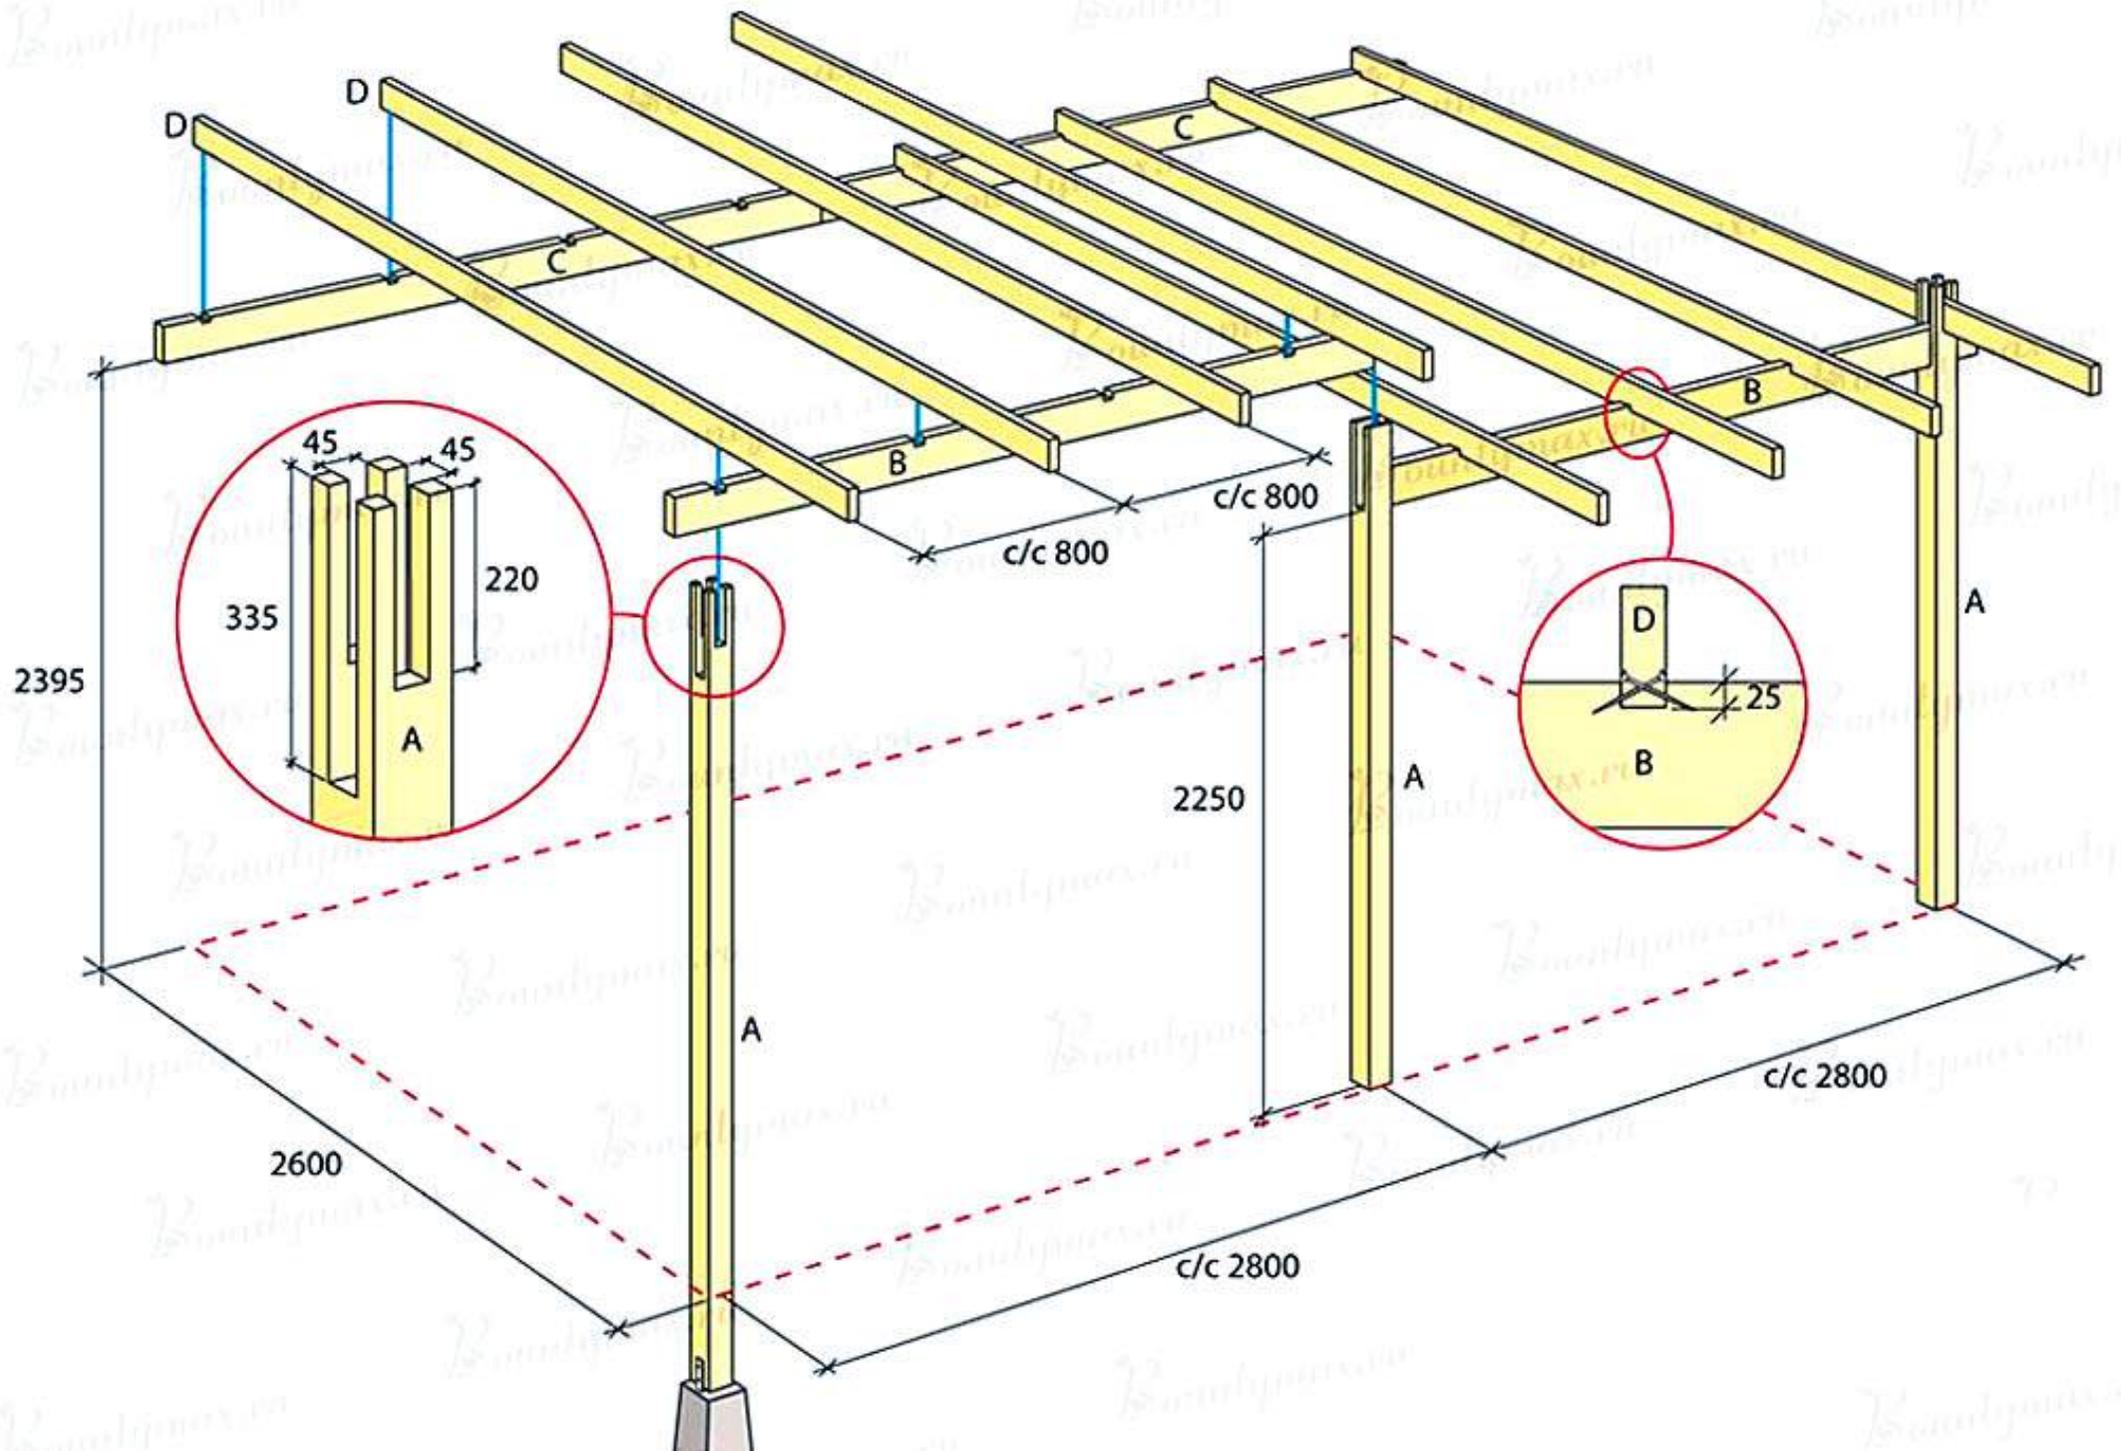


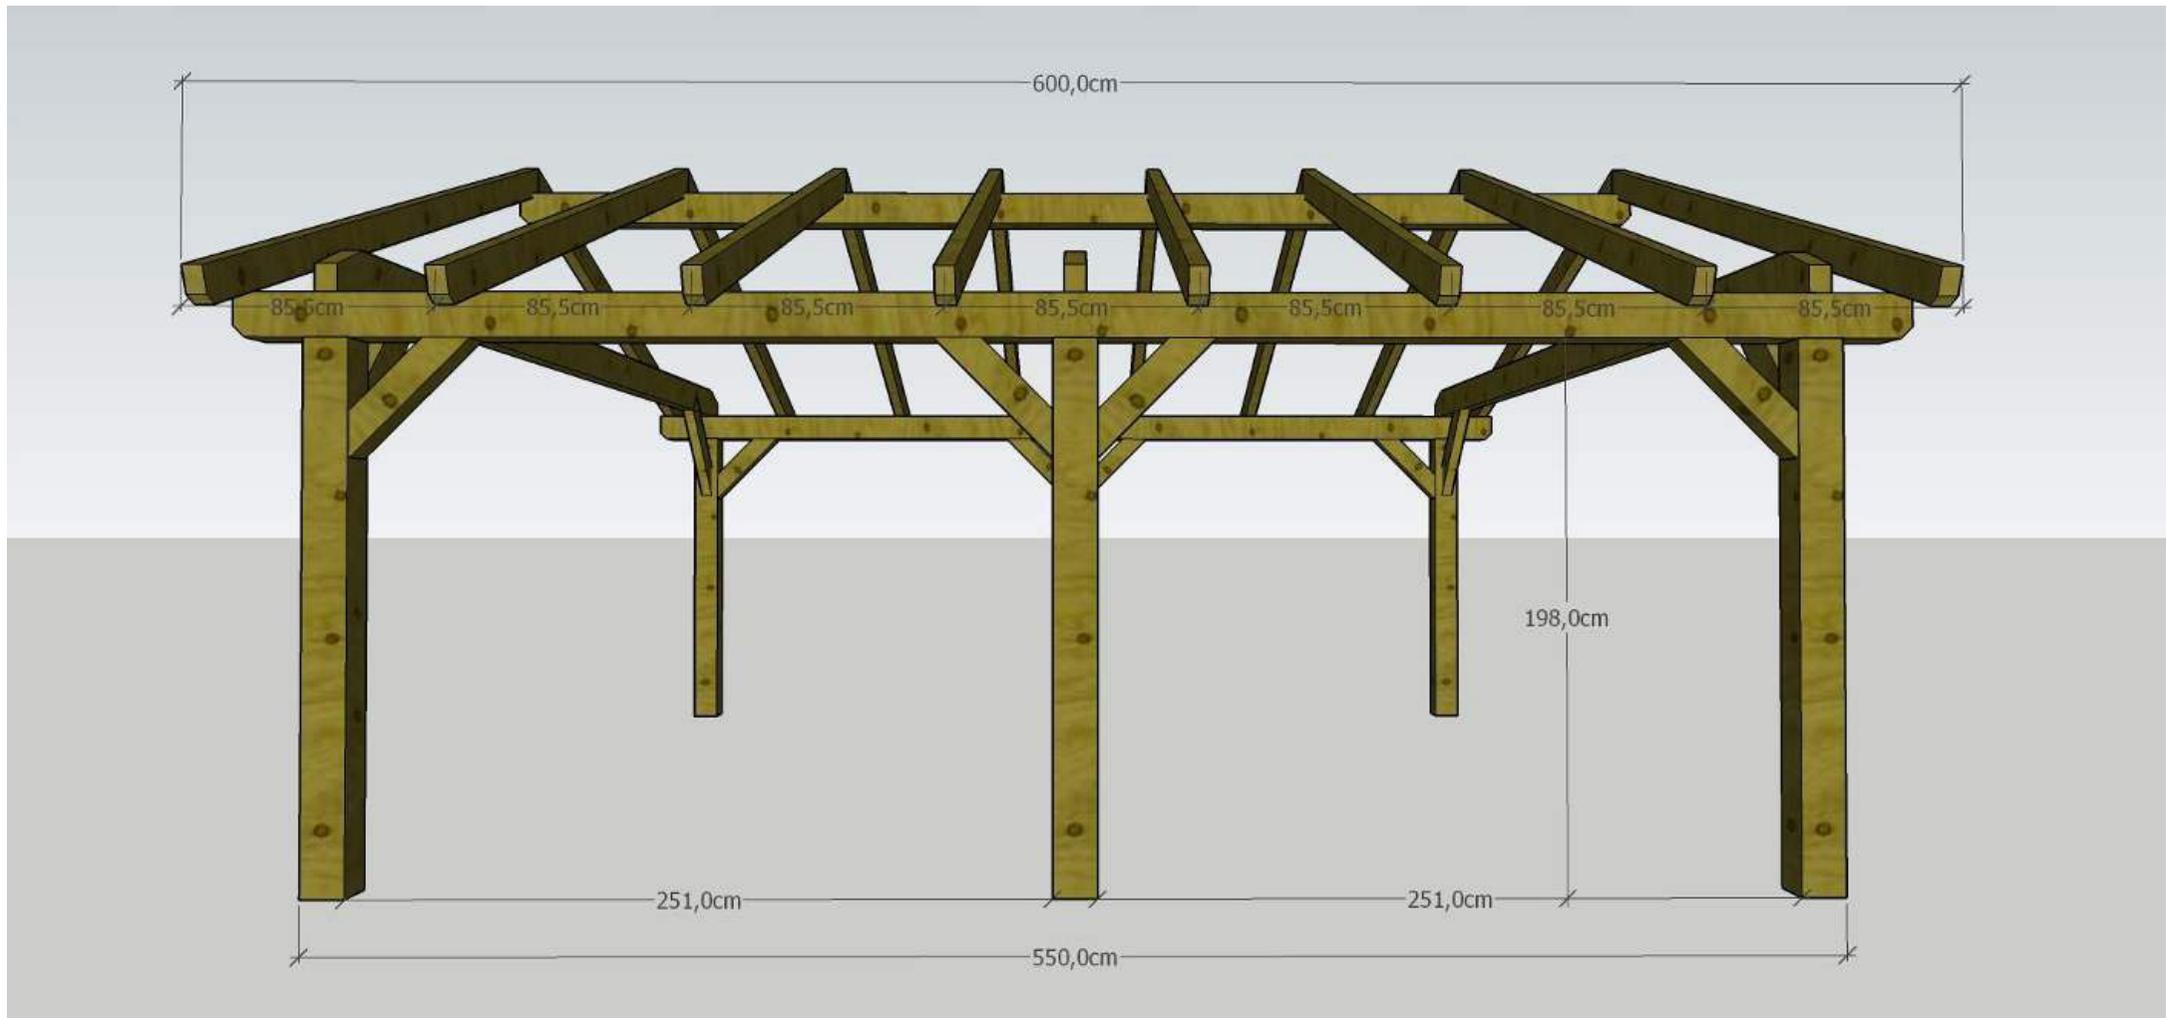


Подстропильные
доски 150x50 мм

Обрешетка из брусков 40x50 (h),
50x50 мм и шагом установки 45 см

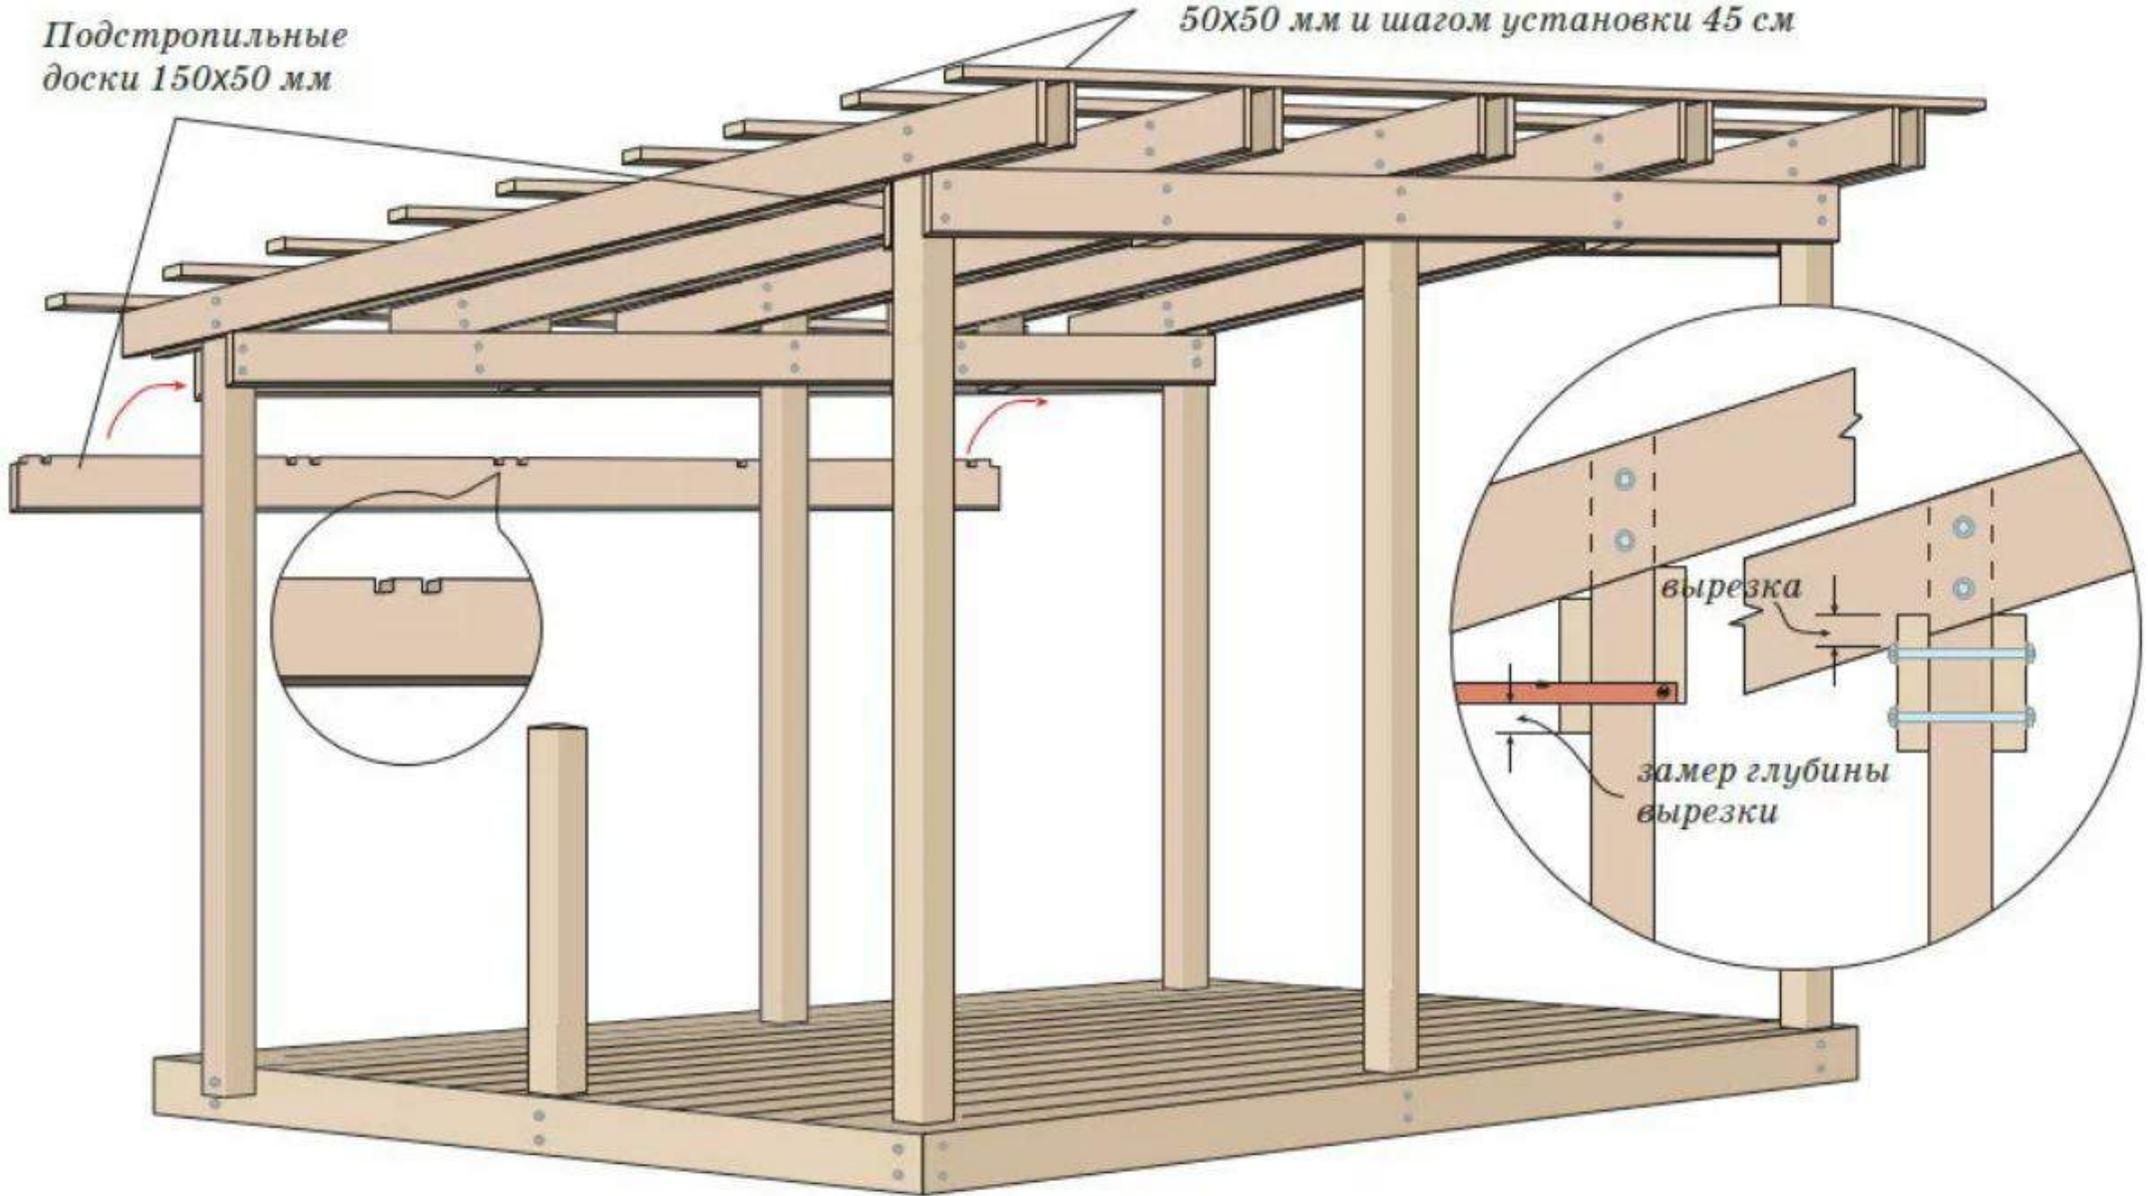

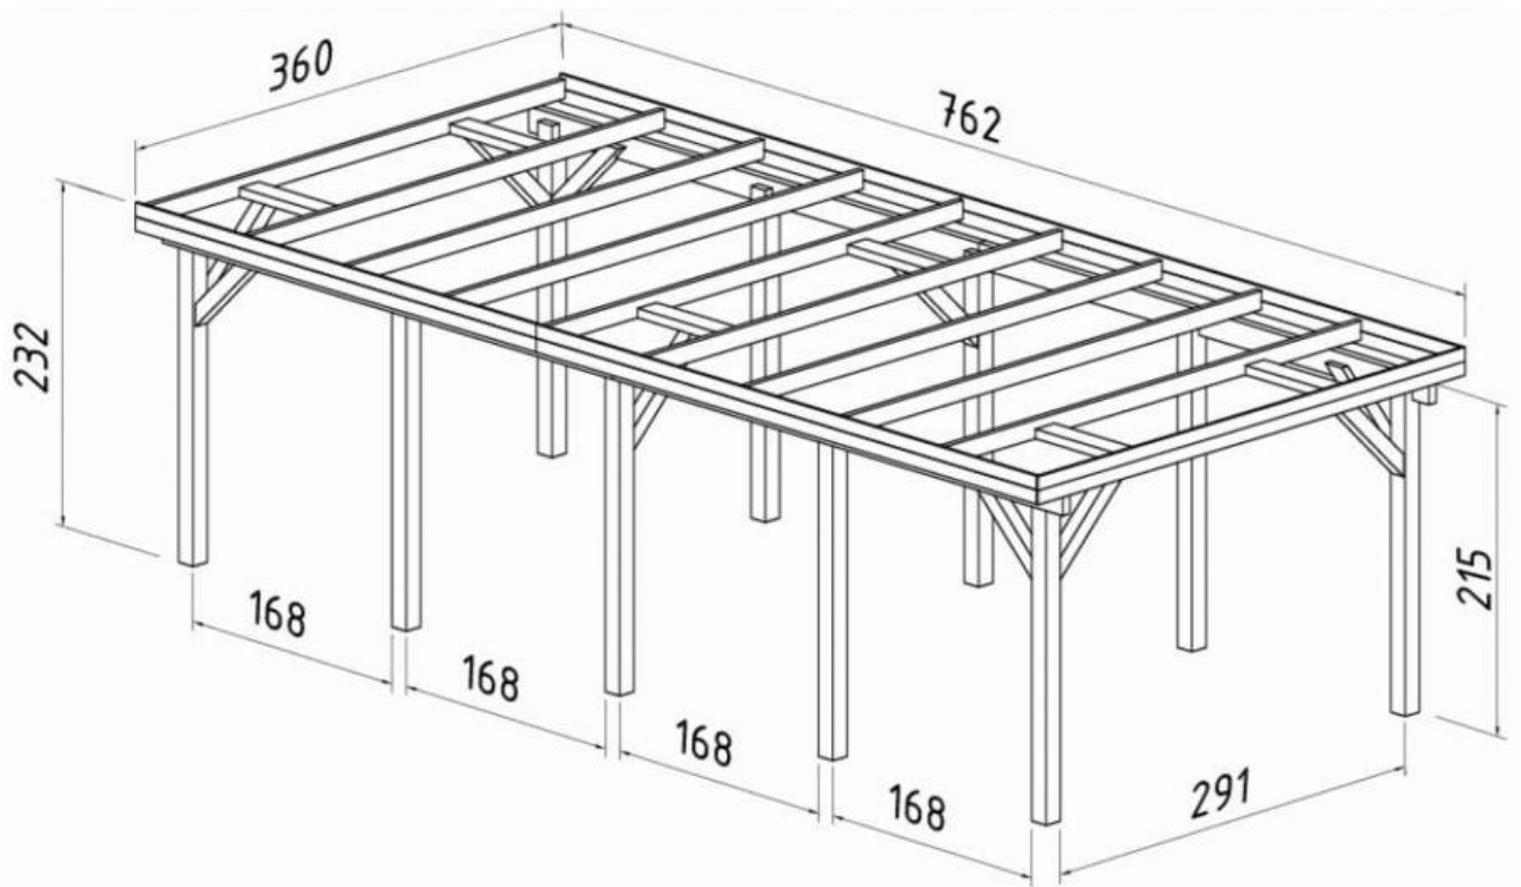

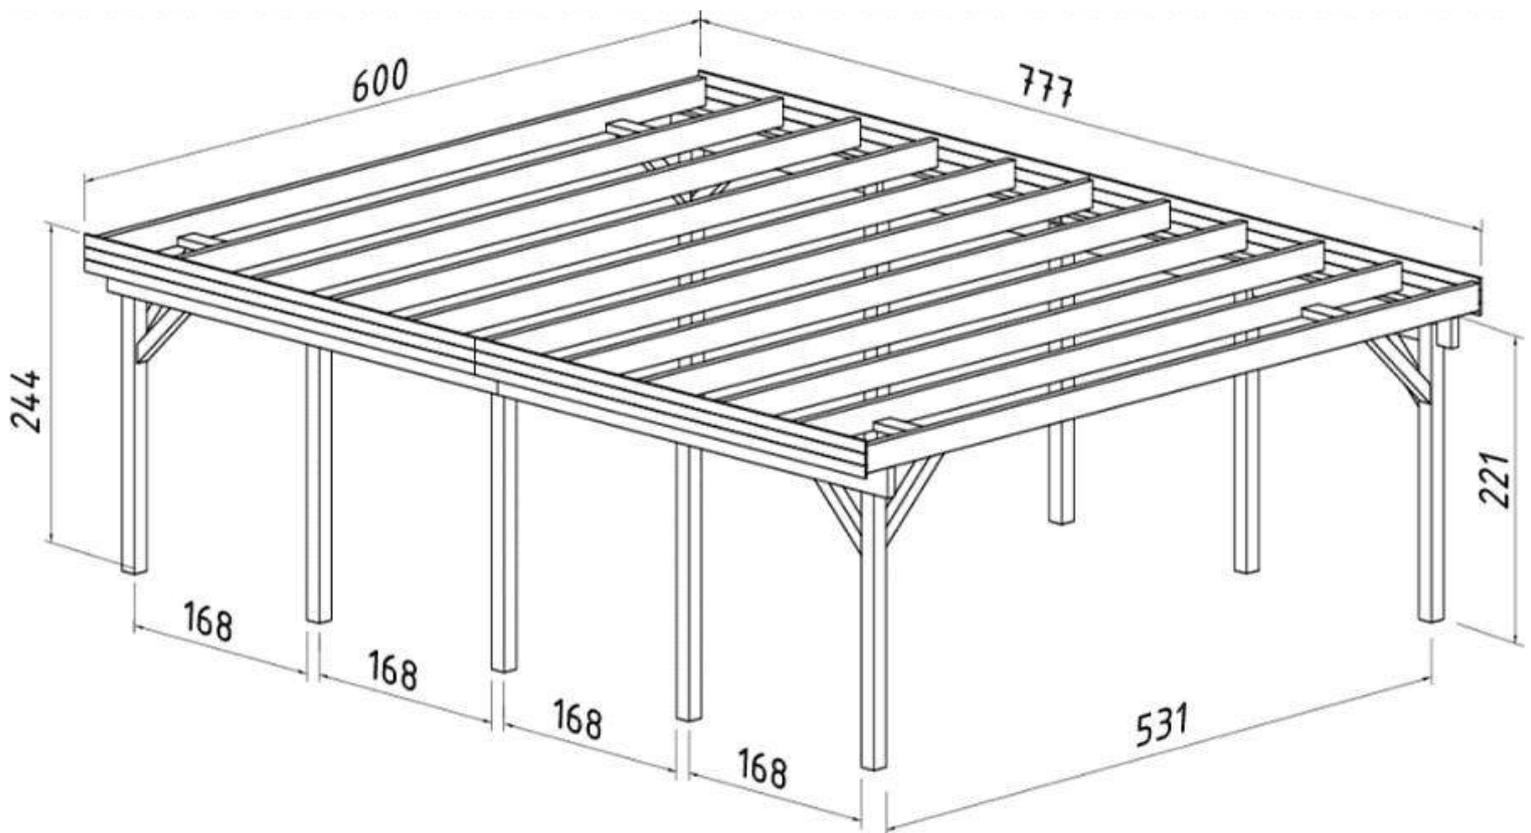

MAS RECURSOS EN:



Material compartido con fines educativos
El libro pertenece a sus respectivos autores.